

# VZ-AI PVM SERIES

## 10" AI PUBLIC VIEW MONITOR

---

### AI PVM USER MANUAL



**ViewZ®**  
[www.viewzusa.com](http://www.viewzusa.com)

This device complies with NDAA (National Defense Authorization Act).

Please read this manual thoroughly before use, and keep it handy for future reference.

# CONTENTS

**Safety Instruction** ..... 3

    1. Mark Indication & Substance ..... 4

    2. Warning ..... 4

    3. Caution ..... 5

    4. Operational Temperature & Humidity ..... 5

    5. Dot Defect (dead pixel) of TFT ..... 5

    6. FCC RF INTERFERENCE STATEMENT ..... 6

**Installation** ..... 7

    1. Package ..... 7

    2. Interface ..... 8

    3. Connect External Equipments ..... 9

    4. Remote Control Function ..... 12

**Function** ..... 13

    1. Monitor Button Function ..... 14

    2. OSD Control and Function ..... 16

    3. Media Card Control and Function ..... 29

**Mounting Guide** ..... 34

**Specification** ..... 35

**Trouble Shooting** ..... 38

**RMA** ..... 39

**Warranty** ..... 40

# SAFETY INSTRUCTION

## Important Safety Instruction

1. Read all warnings.
2. Follow all instructions to ensure longevity of monitor.
3. Do not place the monitor near water.
4. Clean only with dry cloth.
5. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
6. Do not install near any heat sources such as radiators, heat registers, stoves, or other heat generating devices.
7. Do not override the safety purpose of the polarized or grounding-type plug.
8. A polarized plug has two blades with one wider than the other.
9. A grounding type plug has two blades and a third grounding prong.
10. The wide blade and the third prong are provided for your safety.
11. If the provided plug does not fit into your outlet, consult with electrician for replacement of the outlet.
12. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where it connects to the monitor.
13. Only use attachment/accessories specified by the manufacturer.
14. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the monitor. When a cart is used, use caution when moving the cart & monitor in combination to avoid injuries.
15. Unplug the monitor during lightning storms or when unused for long periods of time.
16. Refer all servicing to qualified service personnel. Servicing is required when the monitor has been damaged in any way.



The monitor shall not be exposed to dripping or splashing and objects containing liquids, such as vases shall not be placed near the monitor.

The monitor should have ample distance (e.g. 10cm) from the wall for sufficient ventilation.

# SAFETY INSTRUCTION

## Important Safety Instruction

### Mark Indication and Substance



CAUTION : TO REDUCE THE RISK OF ELECTRICAL SHOCK,  
DO NOT REMOVE COVER (OR BACK). NO USER  
SERVICEABLE PARTS INSIDE. REFER SERVICING TO  
QUALIFIED SERVICE PERSONNEL



This symbol is intended to alert the user to the presence of uninsulated & dangerous voltage within the monitor's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the monitor.

### Warning

- Do not use damaged or loose cables and plug.
- Do not pull the plug out by the wire nor touch the plug with wet hands.
- Use only a properly grounded plug and receptacle.
- Do not connect too many extension cords or plugs to one outlet.
- Do not excessively bend the plug and wire.
- Do not disconnect the power cord while it's still plugged into the monitor.
- Do not place any heavy objects on the power cord. Damage to the cord may cause shock or fire.
- Never open the monitor. There are no user-serviceable parts inside and opening will void warranty.
- Removing covers may expose you to dangerous shock hazards or other risks.
- Keep any heating devices away from the power cable and monitor.
- Do not place the monitor near water.
- Do not insert objects of any kind into the monitor's open slots, as they may touch dangerous voltage points.
- Please follow the laws and regulations of your municipality to dispose the monitor properly.
- Do not use the monitor in high temperature, humid, dusty or oily areas.
- Do not install the monitor where it will be exposed to continual vibration.
- Keep the plastic packaging out of children's reach.
- If any damage is detected upon first opening the box, contact agency from which you bought the monitor directly.
- If your monitor does not operate normally – in particular, if there is any unusual sound or smell coming from the monitor – unplug it immediately and contact an authorized dealer or the service center.



# SAFETY INSTRUCTION

## Important Safety Instruction

### Caution

- If the connector between the plug and the pin is dusty or dirty, clean it properly using a dry cloth.
- Make sure to unplug the power cord before cleaning the monitor.
- Make sure to leave a gap between monitor and wall.
- Do not drop the monitor when moving it.
- Place your monitor in a location with low humidity and minimum dust.
- Install the monitor base on a showcase or shelf so that the end of the base does not protrude from the showcase or shelf.
- Do not place the monitor on an unstable or small surface area.
- Do not install inside a vehicle.
- Disconnect the plug from the outlet during storms or lightning or if it has not been used for a long time.
- Do not try to move the monitor by pulling on the power cord.
- Do not cover the vents on the monitor.
- When moving the monitor, turn off and unplug the power cord. Make sure that all cables, including HDMI cable and cables connected to other devices, are disconnected before moving it.
- Place the monitor out of children's reach, as they could damage it by hanging onto it.

### Available Temperature & Humidity

- Operating Temperature : 14 ~ 122°F / -10 ~ 50°C
- Operating Humidity : 5 ~ 90% RH

## Dot Defect (dead pixel) of TFT

ViewZ monitors are manufactured using high-end semiconductor technology with precision ratings of 99.9% and above. However, it may be the case that certain RGB and white pixels seem darker (or entirely unlit i.e. black).

Modern production methods cannot guarantee an absolute fault-free monitor. To this effect, no LED manufacturer can guarantee a defect free panel. A few isolated pixel or sub-pixel faults are considered tolerable and different policies exist that govern the amount of these tolerable values.

While most pixel faults occur in isolated regions, a cluster of dead pixels or sub-pixels can sometimes form for which a separate ruling applies. A cluster is defined as an area of 5x5 pixels. ViewZ's policy on pixel failure: either as an isolated fault or in the form of a cluster is outlined on the website: [www.viewzusa.com](http://www.viewzusa.com)

# FCC RF INTERFERENCE STATEMENT

## Note

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio, TV technician for help.
- Only shielded interface cable should be used.

Finally, any changes or modifications to the equipment by the user not expressly approved by the grantee or manufacturer could void the users authority to operate such equipment.

### ► DOC COMPLIANCE NOTICE

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the radio interference regulation of Canadian Department of communications.

## Statement

- VGA and XGA are the registered trademark of IBM.
- VESA is the trademark of Video Electronics Standard Association.
- HDMI, HDMI logo and High-Definition Multimedia Interface (high definition multimedia digital interface) are the trademark or registered trademark of HDMI Licensing LLC.




If some company or product trademark is not particularly stated, the use of trademark has been fully recognized. Do not alter, decompile, disassemble, decode or conduct reverse engineering to the software installed in the product, or it can be deemed as breach of the law.

# INSTALLATION





## Installation Tools

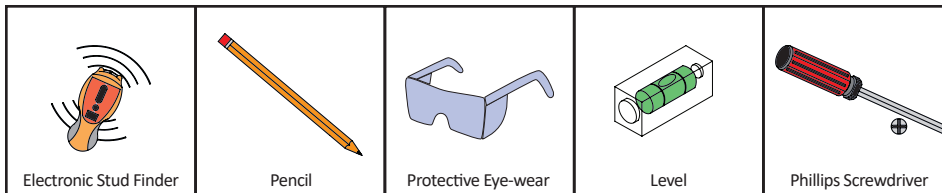The following tools may be required depending on your installation.



## Assembly Components - provided

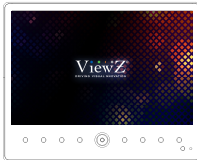Your ViewZ monitor is shipped with all proper installation hardware and components. If there are parts missing and/or damaged, please stop the installation and contact ViewZ USA at (888)-998-4399.

<p>For VZ-PVM-A1W4N/A1B4N</p>  <p>10" Landscape Public View Monitor (Qty 1)</p>	<p>For VZ-PVM-A1W4P/A1B4P</p>  <p>10" Portrait Public View Monitor (Qty 1)</p>	 <p>Quick Reference Guide (Qty 1) Remote Controller (Qty 1)</p>	 <p>QR Code Guide (Qty 1)</p>
---	--	--	---



## Mounting Option

Your ViewZ monitor is compatible with ViewZ monitor mounts. For more information, please contact ViewZ USA at (888)-998-4399.

### Wall Mount

- |  |  |  |
|--|--|--|
| <p>• Part # <b>WM05</b></p>  <ul style="list-style-type: none"> <li>• Flat Wall Mount</li> <li>• VESA 75 ~ 100</li> </ul> | <p>• Part # <b>AM02-A</b></p>  <ul style="list-style-type: none"> <li>• Tilting -20° ~ 20°</li> <li>• Swivel 180°</li> <li>• VESA 75 ~ 200</li> </ul> | <p>• Part # <b>WM11</b></p>  <ul style="list-style-type: none"> <li>• Tilting ± 20°</li> <li>• Swivel ± 30°</li> <li>• VESA 50 ~ 100</li> </ul> |
|--|--|--|


### Ceiling Mount

- |   |  |
|---|--|
| <p>• Part # <b>SCM</b></p>  <ul style="list-style-type: none"> <li>• Tilting -90° ~ 90°</li> <li>• Swivel 180°</li> <li>• VESA 75</li> </ul> | <p>• Part # <b>SM-01</b></p>  <ul style="list-style-type: none"> <li>• Tilting -35° ~ +35°</li> <li>• Swivel 180°</li> <li>• VESA 75 ~ 100</li> </ul> |
|---|--|

# CONNECT EXTERNAL EQUIPMENTS


## 10" Landscape AI PVM (VZ-PVM-A1W4N/A1B4N) Interface Input Ports

The following image is the description of interface input ports

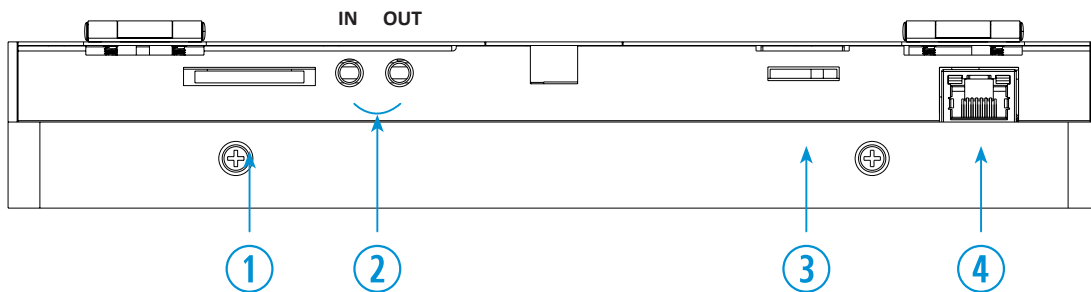

- |                              |                            |
|------------------------------|----------------------------|
| 1. SD CARD (MEDIA PLAYER) IN | 3. Micro SD (RECORDING) IN |
| 2. ALARM IN / OUT            | 4. ETHERNET 10/100 (P.o.E) |

## 10" Portrait AI PVM (VZ-PVM-A1W4P/A1B4P) Interface Input Ports

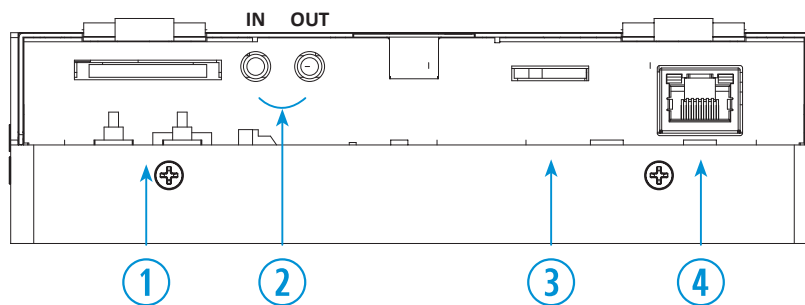


- |                              |                            |
|------------------------------|----------------------------|
| 1. SD CARD (MEDIA PLAYER) IN | 3. Micro SD (RECORDING) IN |
| 2. ALARM IN / OUT            | 4. ETHERNET 10/100 (P.o.E) |

# CONNECT EXTERNAL EQUIPMENTS

## Record Camera - Micro SD Card Installation of 10" AI PVM (VZ-PVM-A1W4N/A1B4N)

The following image is the description of Micro SD card installation

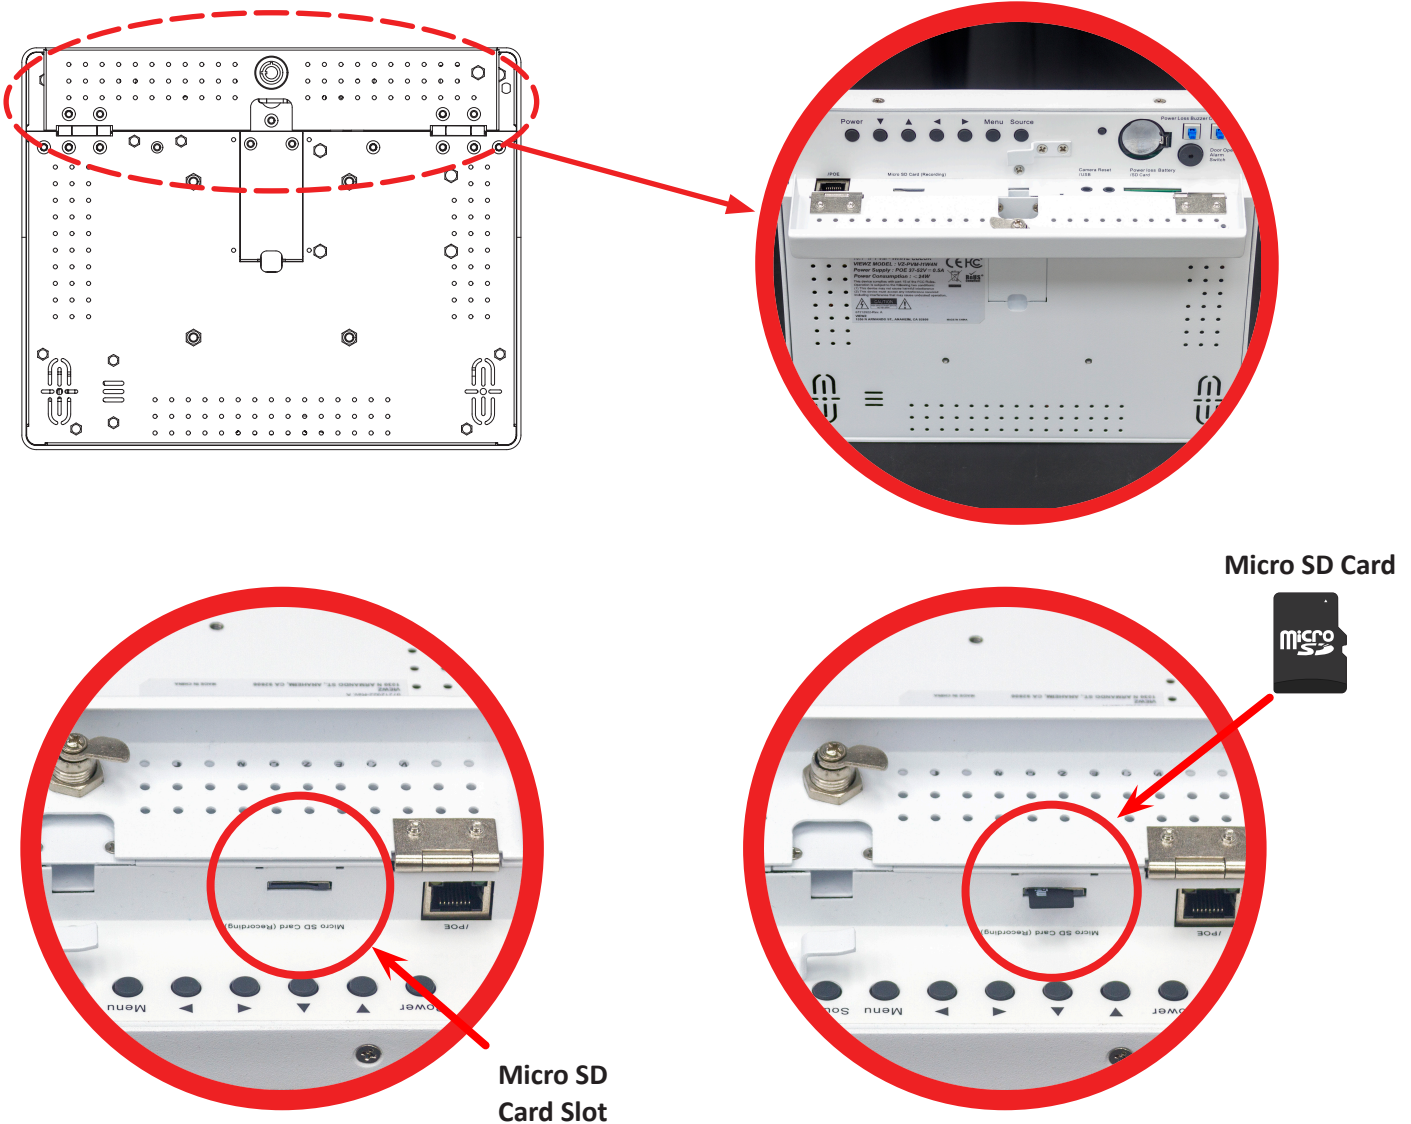

- **Connect Micro SD card**
  1. Open the back case and find the Micro SD card slot
  2. Insert Micro SD card to Micro SD Card slot
  3. To use recording function, please refer the page 88, 89, 89 & 91 of 'VZ-AIPVM-Web-UserManual'




### Note

To use recording function, user should remove every files and format the Micro SD card

# CONNECT EXTERNAL EQUIPMENTS

## Record Camera - Micro SD Card Installation of 10" AI PVM (VZ-PVM-A1W4P/A1B4P)

The following image is the description of Micro SD card installation

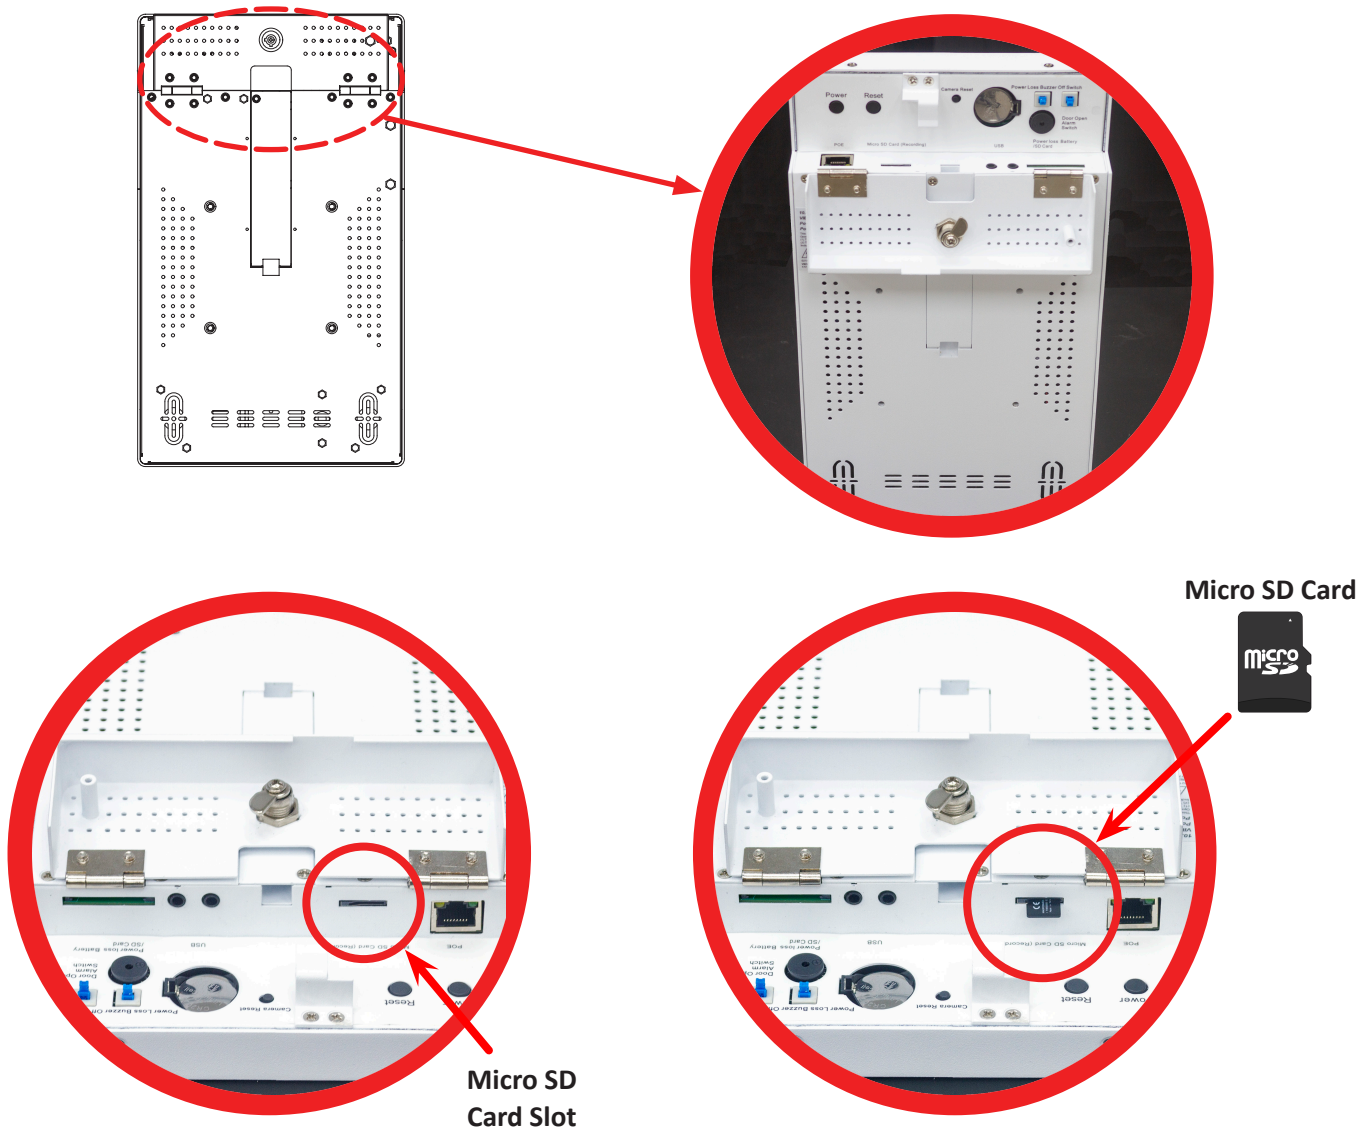

- **Connect Micro SD card**
  1. Open the back case and find the Micro SD card slot
  2. Insert Micro SD card to Micro SD Card slot
  3. To use recording function, please refer the page 88, 89, 89 & 91 of 'VZ-AIPVM-Web-UserManual'





### Note

To use recording function, user should remove every files and format the Micro SD card

# CONNECT EXTERNAL EQUIPMENTS

## Recording Camera - Micro SD Card Installation of 10" Landscape & Portrait AI PVM

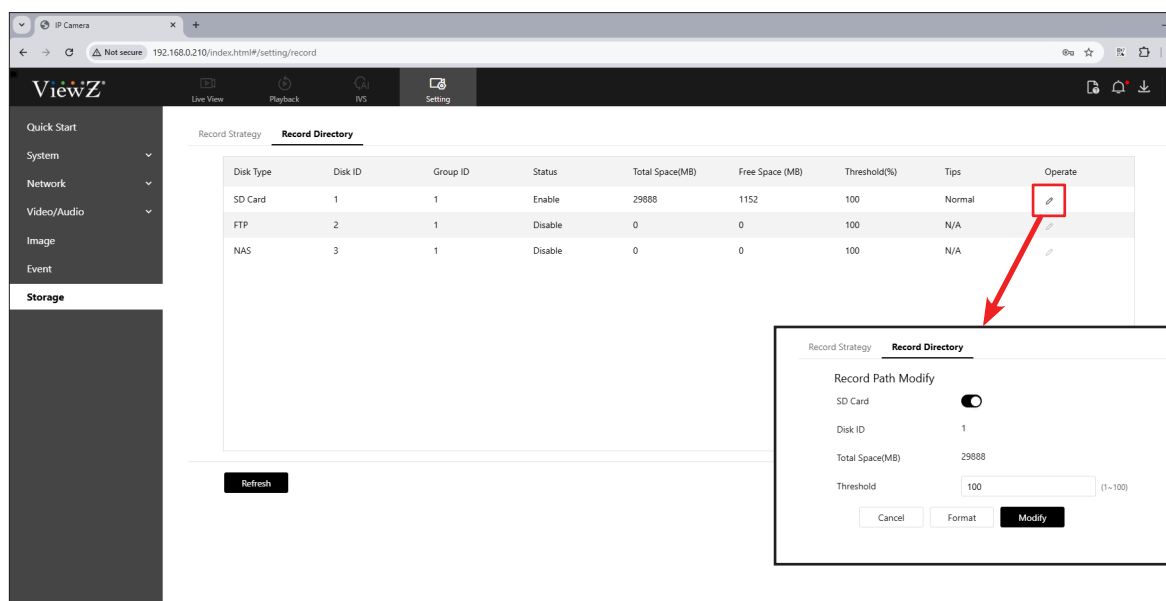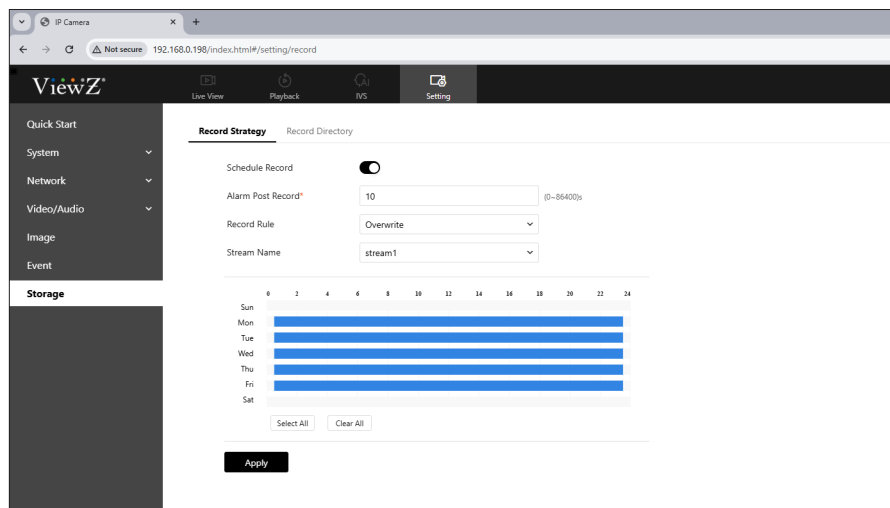

About the detailed feature of recording, please refer page 100 ~ 103 & 15 ~ 17 of 'VZ-AIPVM-Web-UserManual'




# REMOTE FUNCTION

## Remote Controller

### Remote Controller

1. **Power**
2. **Source** - Select Input Source
3. **Mute** - Turn off the sound
4. **Menu** - Enter / Exit OSD
5. **Exit** - Exit OSD with saving current value
6. **Left & Right** ◀(VOL)▶, **Up & Down** ▲▼
7. **Enter** - Select current setting value on Input source
8. **PIP, SWAP, P.POS, P.Size, S.Sat, ARC, APC, ACC**  
- Not working

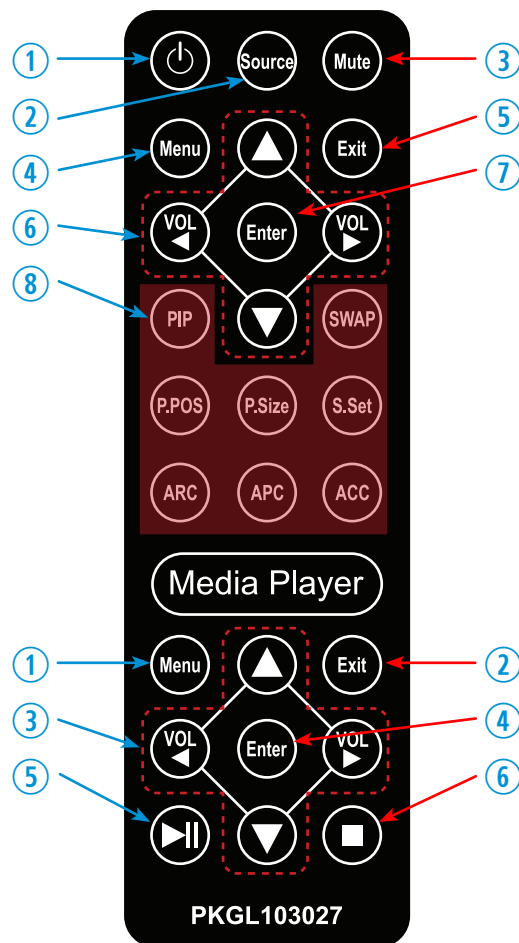

### Media Controller

1. **Menu** - Enter / Exit Media Player Menu
2. **Exit** - Exit Media Player Menu
3. **Left & Right** ◀(VOL)▶, **Up & Down** ▲▼
4. **Enter** - Confirm the selection
5. **Stop & Play** - Freeze the media play
6. **Stop** - Stop the media play




Display image, sound and custom settings can be adjusted in OSD (On Screen Display) menu by remote controller.  
To adjust monitor setting value :

1. Press the **MENU** button to enter the OSD menu
2. Press the **SOURCE** button to select input source
3. Press the **ENTER** button to select the desired **sub MENU**. The selected **sub MENU** will be highlighted
4. Press the ◀ / ▶ button to enter the **sub MENU** for adjusting items
5. Change the value as user want to adjust by using the ◀ / ▶ buttons
6. Press the **ENTER** button to confirm
7. Press the **BACK** button to exit & save adjustment value on **sub MENU**
8. Press the **MUTE** button to mute audio - audio only works with a selected input source



# CONTROL AND FUNCTION


## On Monitor, Front Area

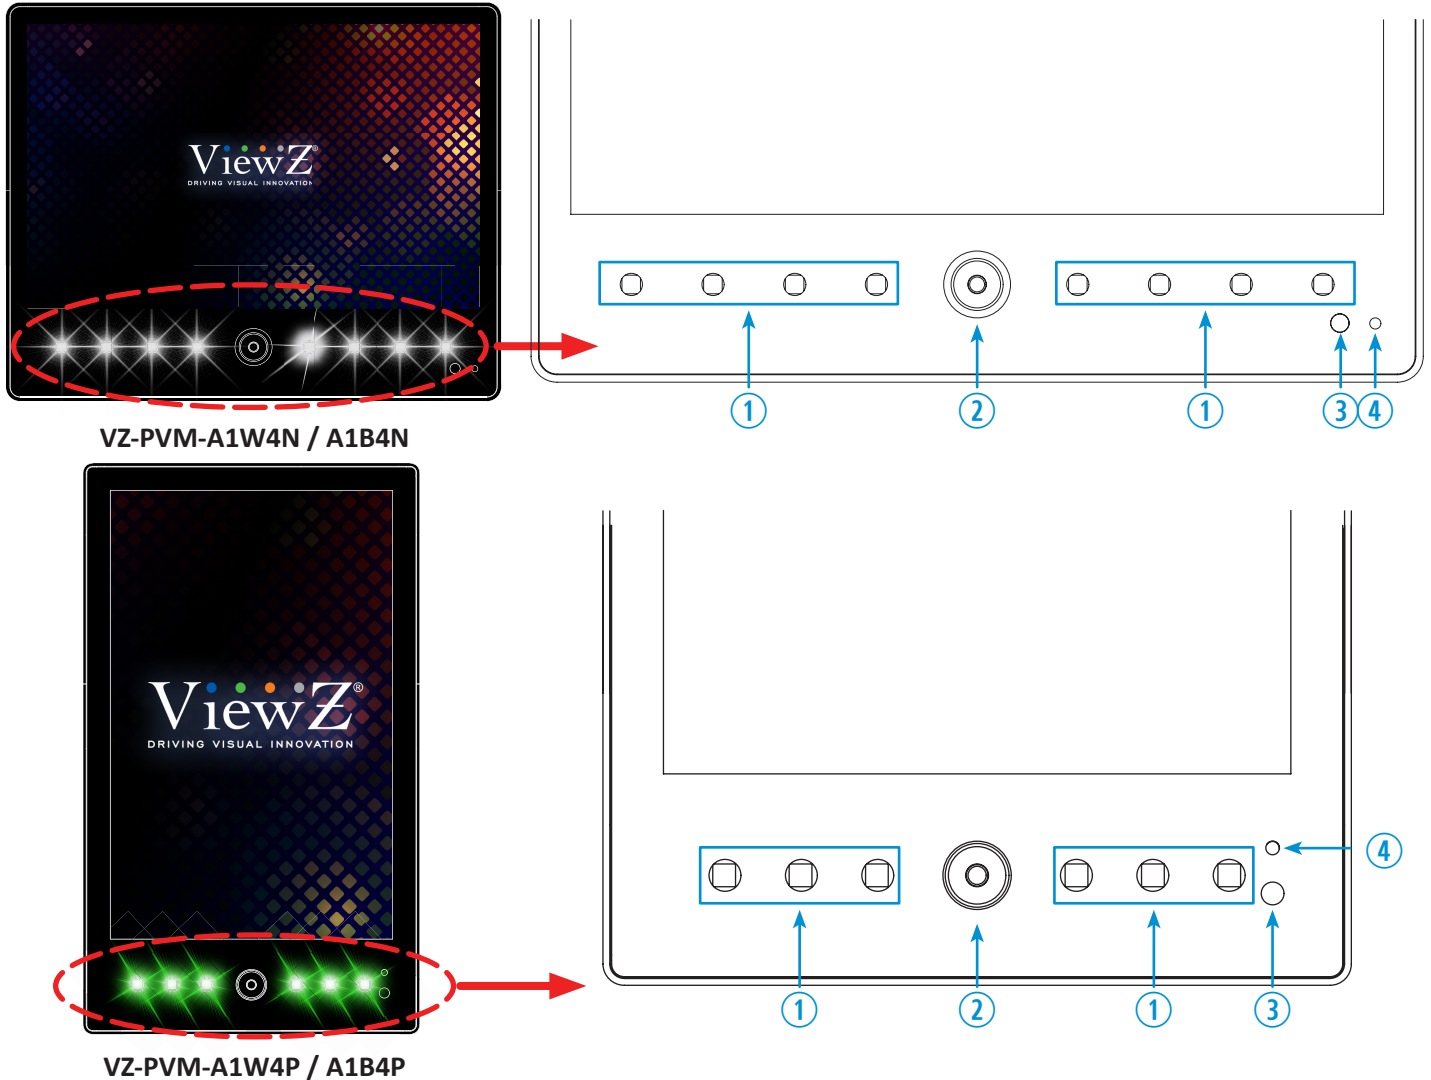

1. LED Indicator  
User can choose a blinking LED color - red, green, blue, white, yellow and no color.  
\* 10 inch Landscape have 8 LED indicators  
\* 10 inch Portrait has 6 LED indicators
2. Built-in Camera / Motion Detection  
The monitor will display the built-in camera's video  
Built-in camera has the motion detection function
3. IR Sensor  
Sensor for the remote controller
4. Power On/Off LED  
Blue color: monitor on  
Red color : monitor off

# CONTROL AND FUNCTION

## On Monitor, Button Control for VZ-PVM-A1W4N / A1B4N

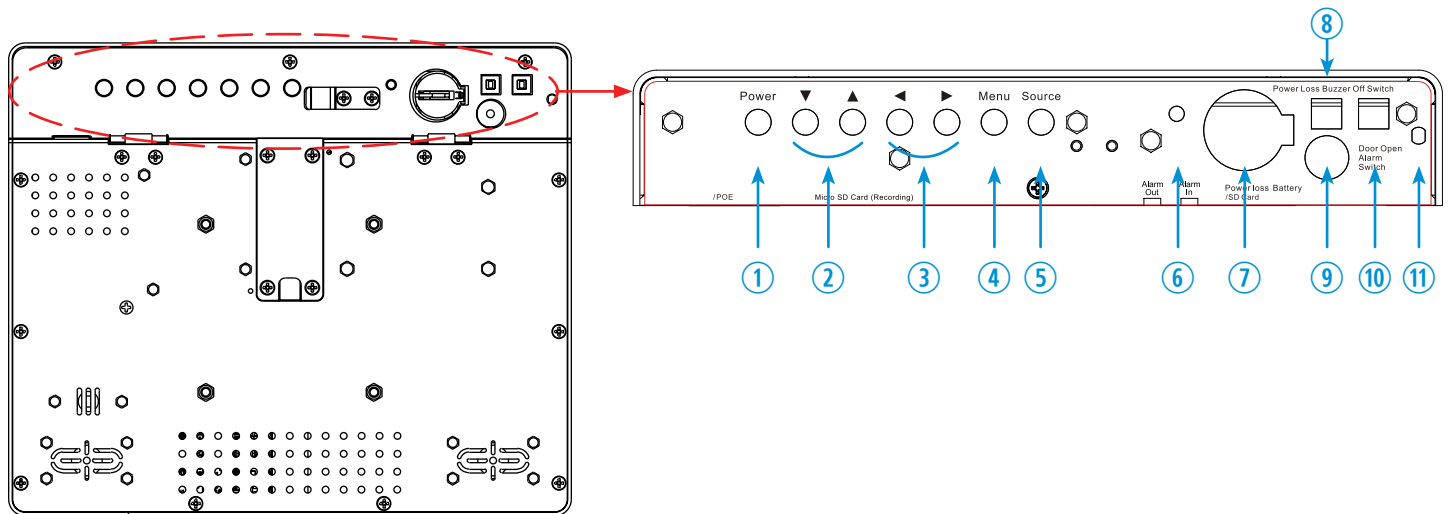

- |   |   |
|---|---|
| <ol style="list-style-type: none"> <li>1. Power<br/>To turn the monitor power on / off</li> <li>2. Up &amp; Down ▲ ▼<br/>To switch a menu on OSD</li> <li>3. Left &amp; Right ◀ (VOL) ▶<br/>To change the value on the selected menu</li> <li>4. Menu<br/>To enter or exit the OSD / Select a menu on OSD</li> <li>5. Source<br/>To select an input source</li> </ol> | <ol style="list-style-type: none"> <li>6. Camera Reset<br/>To reset the camera settings to the factory default</li> <li>7. Power Loss Buzzer Battery</li> <li>8. Power Loss Buzzer Off Switch<br/>To turn off the buzzer of power loss alarm</li> <li>9. Power Loss Buzzer</li> <li>10. Door Open Alarm Switch<br/>To make alarm when door open</li> <li>11. Video Obstruction Alarm Lighting Sensor</li> </ol> |
|---|---|

## Monitor Button Function


All picture, sound settings and setup can be adjusted in OSD (On Screen Display) menu.

To adjust the OSD screen:

1. Press the **MENU** button to enter the **OSD MENU**
2. Press the ◀ / ▶ buttons to select the desired **main-MENU**. The selected **main-MENU** is highlighted
3. Press the ▲ / ▼ buttons to select the desired **sub-MENU**. The selected **sub-MENU** is highlighted
4. Change the value you wish to adjust by using the ◀ / ▶ buttons
5. Press the **MENU** button to confirm the adjustment on **sub-MENU**
6. Press the **MENU** button to exit the **sub-MENU** and go back to the **main-MENU**
7. Press the **MENU** button to exit the **OSD MENU**

# CONTROL AND FUNCTION


## On Monitor, Button Control for VZ-PVM-A1W4P / A1B4P

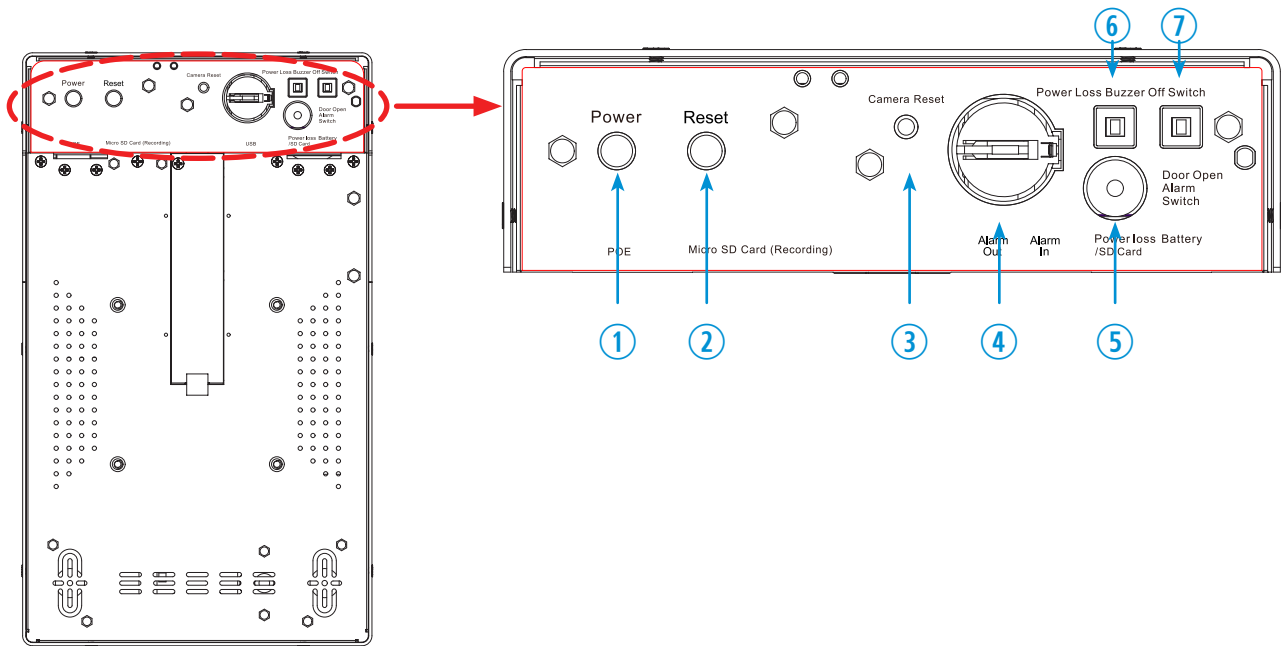

- |  |  |
|--|--|
| 1. Power   | 5. Power Loss Buzzer                       |
| To turn the monitor power on / off                   |  |
| 2. Reset   | 6. Power Loss Buzzer Off Switch            |
| To reset the monitor settings to the factory default | To turn off the buzzer of power loss alarm |
| 3. Camera Reset                                      | 7. Door Open Alarm Switch                  |
| To reset the camera settings to the factory default  | To make alarm when door open               |
| 4. Power Loss Buzzer Battery                         | 8. Video Obstruction Alarm Lighting Sensor |

# CONTROL AND FUNCTION


## Select Input Source

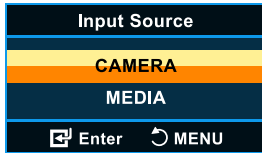

Press 'SOURCE' button on monitor or 'INPUT' button on remote controller.

Press ▲ / ▼ button to change input source and then press ◀ / ▶ button or Enter to select input source on remote controller.

## Volume



 


Press ◀ / ▶ buttons to adjust volume on monitor - support only VZ-PVM-A1W4N/A1B4N

Press ◀ / ▶ buttons to adjust volume on remote controller - support all 10" models (VZ-PVM-A1W4N/A1B4N/A1W4P/A1B4P)

# CONTROL AND FUNCTION

## Picture

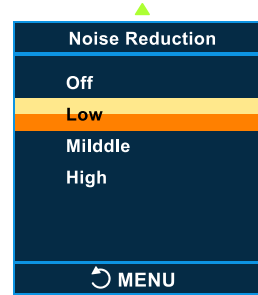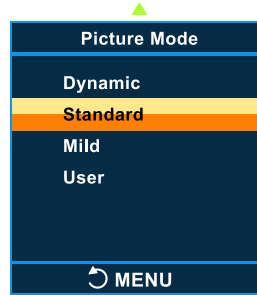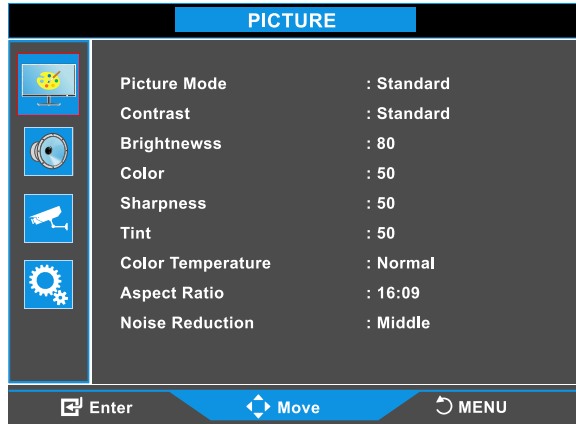

▲/▼ MOVE ◀/▶ SELECT(ADJUST) MENU RETURN


FUNCTION		VALUE
PICTURE MODE	Adjust the image color setting	See table below
CONTRAST	Adjust the contrast	0 ~ 100
BRIGHTNESS	Adjust the brightness	0 ~ 100
COLOR	Adjust the color	0 ~ 100
SHARPNESS	Adjust the sharpness	0 ~ 100
TINT <sup>1)</sup>	Adjust the tint	0 ~ 100
COLOR TEMPERATURE	Adjust the color setting	See table on page 17
ASPECT RATIO	Adjust the video format	See table on page 17
NOISE REDUCTION	Adjust the noise level	OFF / LOW / MIDDLE / HIGH

1) Only available in Composite ( video ) input

PICTURE MODE	
DYNAMIC	Provides enhanced contrast and sharpness
STANDARD	Provides standard contrast and sharpness
MILD	Reduces contrast and sharpness
USER	Applies user selected values - brightness, contrast, color and hue

# CONTROL AND FUNCTION

## Picture

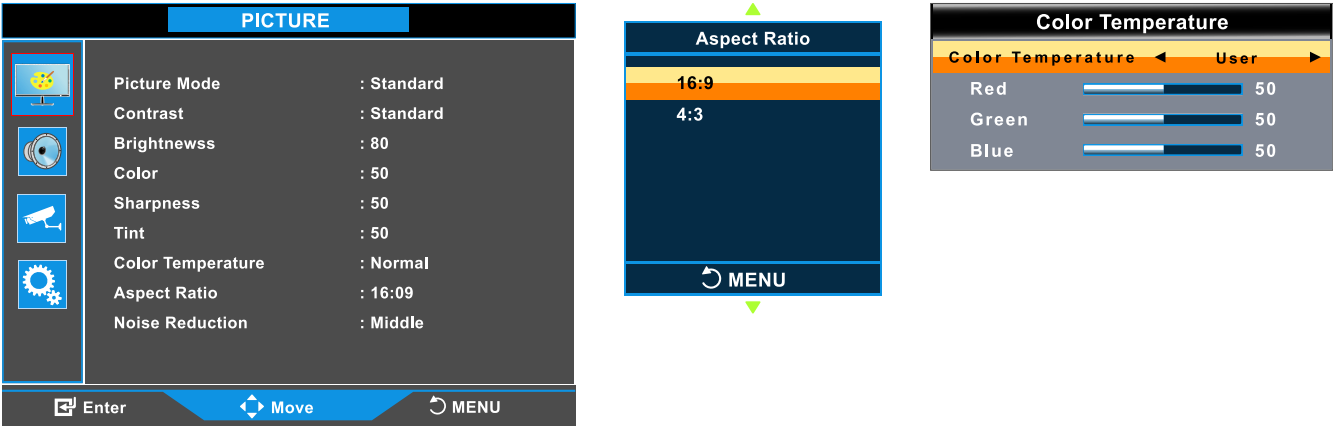


▲/▼ MOVE ◀/▶ SELECT(ADJUST) MENU RETURN

COLOR TEMPERATURE	
WARM	Give the white color a reddish tint
NORMAL	Give the white color a neutral tint
COOL	Give the white color a blue-ish tint
USER	Applies user selected values

ASPECT RATIO	
16 : 9	Sets the image size to 16 : 9
4 : 3	Sets the image size to 4 : 3

# CONTROL AND FUNCTION

## Sound

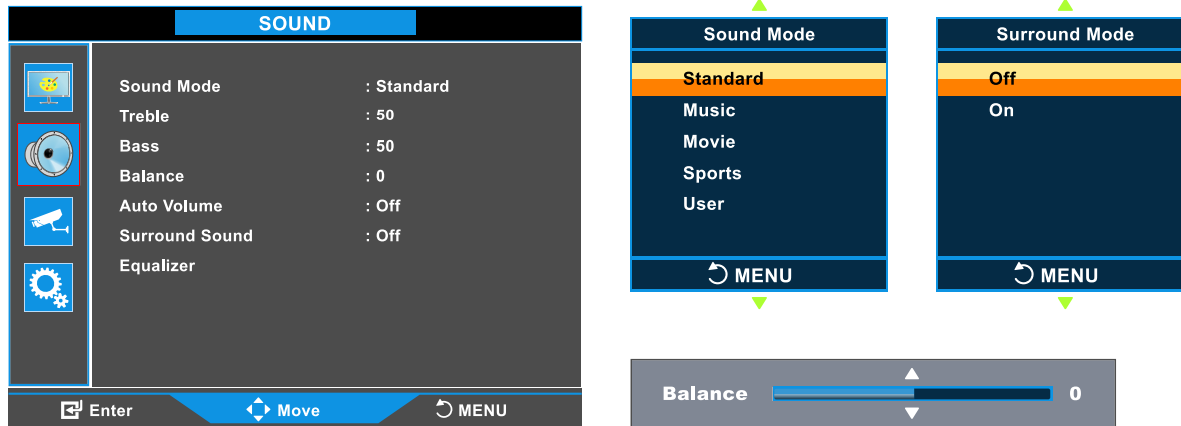



▲/▼ MOVE ◀/▶ SELECT(ADJUST) MENU RETURN

	FUNCTION	VALUE
SOUND MODE	Selects one of the presets	STANDARD / MUSIC / MOVIE / SPORTS / USER
TREBLE <sup>1)</sup>	Adjusts the bass level	0 ~ 100
BASS <sup>1)</sup>	Adjusts the bass level	0 ~ 100
BALANCE	Adjusts the balance	0 ~ 100
AUTO VOLUME	Adjusts the volume	0 ~ 100
SURROUND MODE	Adjusts preset sound mode	ON / OFF
EQUALIZER <sup>1)</sup>	Set the equalizer	

1) Only available in USER MODE

# CONTROL AND FUNCTION

## Advance - Setup Alarm

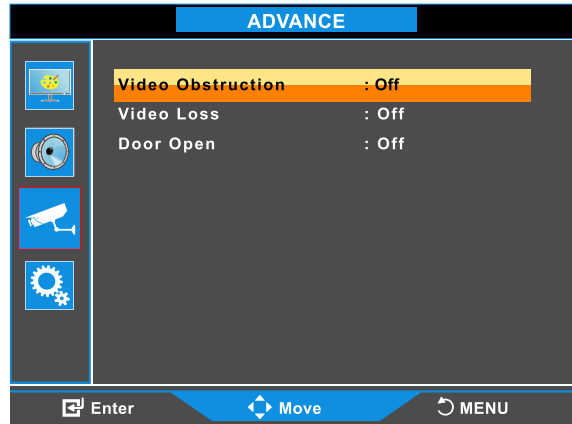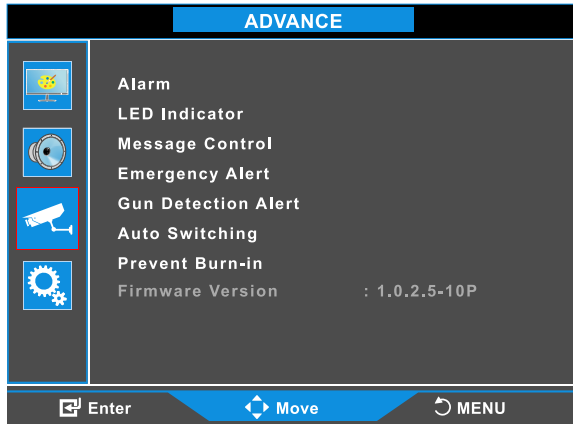

▲/▼ MOVE ◀/▶ SELECT(ADJUST) MENU RETURN

ALARM Option Window



FUNCTION		VALUE
ALARM	See table below	
LED INDICATOR	See table on page 21	
MESSAGE CONTROL	See table on page 22	
EMERGENCY ALERT	See table on page 23	
GUN DETECTION ALERT	See table on page 25	
AUTO SWITCHING	See table on page 26	
PREVENT BURN-IN	Set periodic image retention	ON / OFF
FIRMWARE VERSION	Display the OSD firmware version	

FUNCTION		VALUE
VIDEO OBSTRUCTION	Set the alarm of PVM's camera block	OFF / ON
VIDEO LOSS	Set the alarm of PVM's video signal loss	OFF / ON
DOOR OPEN	Set the alarm of PVM's backside door open	OFF / ON



# CONTROL AND FUNCTION

## Advance - Adjust LED Indicator

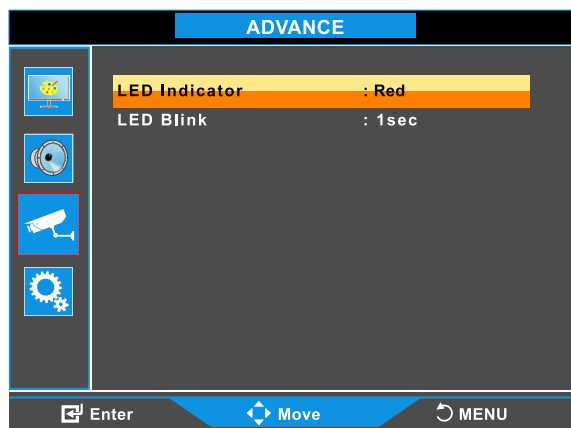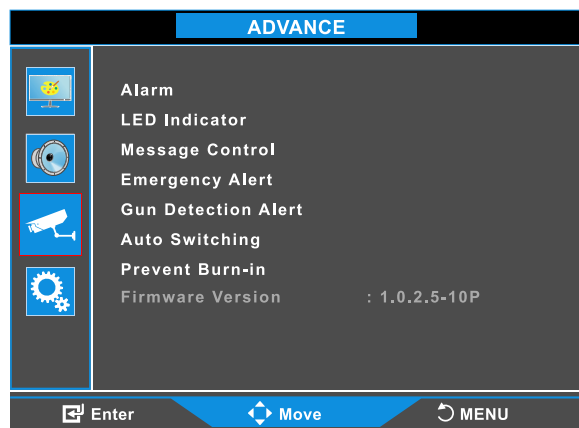



▲/▼ MOVE ◀/▶ SELECT(ADJUST) MENU RETURN

LED INDICATOR Option Window

FUNCTION		VALUE
LED INDICATOR	Sets the color of LED indicator	OFF / RED / GREEN / BLUE / WHITE / YELLOW
LED BLINK	Sets the interval time of blinking LED indicator	OFF / 1 ~ 3 sec

# CONTROL AND FUNCTION

## Advance - Setup Displaying Message

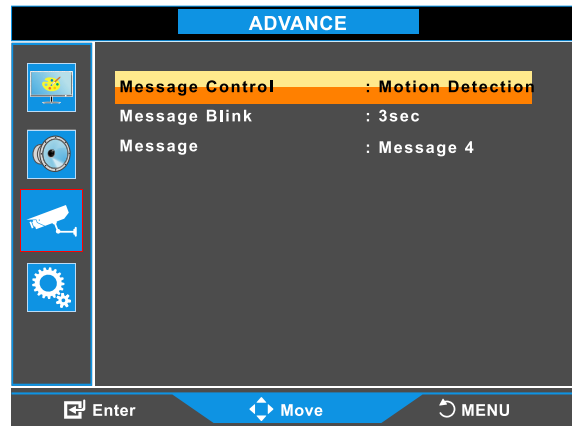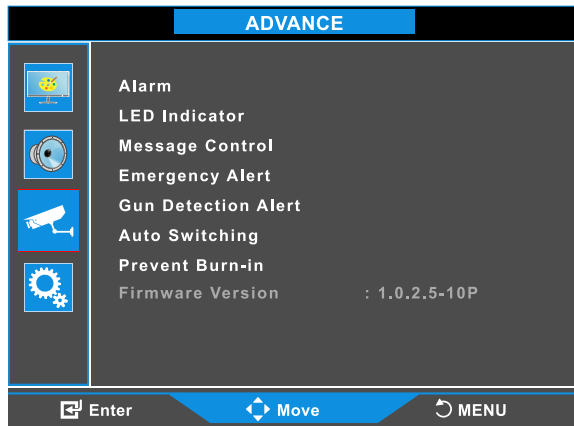

▲/▼ MOVE ◀/▶ SELECT(ADJUST) MENU RETURN

MESSAGE CONTROL Option Window

FUNCTION		VALUE
MESSAGE CONTROL <sup>1)</sup>	Enables the display of message	OFF / MOTION DETECTION / ON
MESSAGE BLINK	Sets the interval time of blinking message	OFF / 1 ~ 3 sec
MESSAGE <sup>2)</sup>	Selects the preset text	MESSAGE 1 - <b>RECORDING</b> MESSAGE 2 - <b>RECORDING IN PROGRESS</b> MESSAGE 3 - <b>SURVEILLANCE IN PROGRESS</b> MESSAGE 4 - <b>VIDEO RECORDING IN PROGRESS</b>

1) ON - Always turn on the selected preset message

1) MOTION DETECTION - When AI PVM detects a motion, AI PVM will display the selected preset message



2) PRESET TEXT - TEXT 1 : **Recording** / TEXT 2 : **Recording in Progress** / TEXT 3 : **Surveillance in Progress** / TEXT 4 : **Video Recording in Progress**

2) English & Spanish OSD languages are using **PRESET TEXT IMAGE**.

2) User can select an OSD language among English, Spanish, French, Japanese & Portuguese and the language of preset message will be displayed under the selected OSD language

# CONTROL AND FUNCTION


## Advance - Setup Emergency Alert

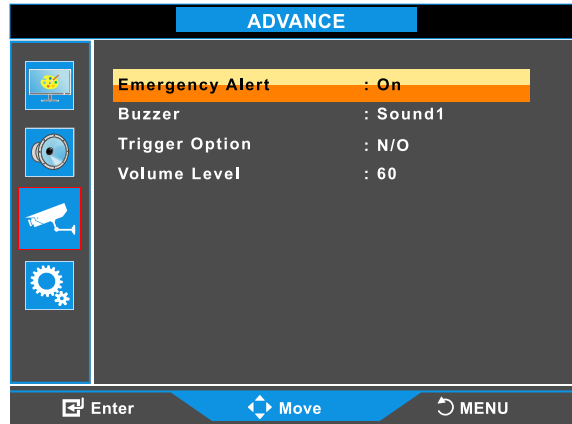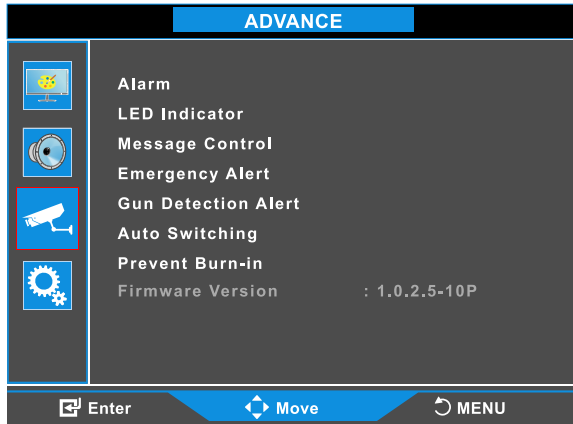

▲/▼ MOVE ◀/▶ SELECT(ADJUST) MENU RETURN

EMERGENCY ALERT Option Window

	FUNCTION	VALUE
EMERGENCY	Enables the emergency alert function which will display an image & make a sound	OFF / ON
BUZZER	Select a buzzer sound when emergency alert is enabled	OFF / SOUND1 / SOUND2
TRIGGER OPTION	Adjust the trigger voltage * 'HIGH' is 3 - 5 Voltage. 'Low' is 1-3 Voltage * 'NO' is normal open. 'NC' is normal close	LOW / HIGH / N/O / N/C
VOLUME LEVEL	Adjust the volume of buzzer sound	0 ~ 100

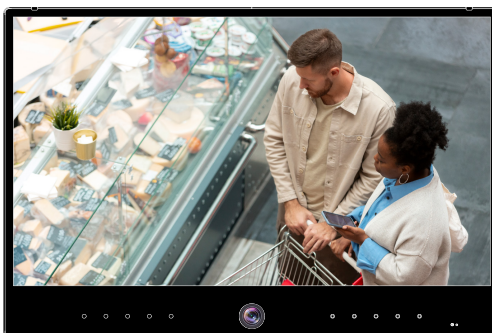

\* When the emergency alert is ON & triggered, AI PVM will display the emergency alert image & make a buzzer sound


# CONTROL AND FUNCTION

## Advance - Setup Emergency Alert - Cable Information


Viewz PVM can accept 4 alarm types - **N/C**, **N/O**, **High** and **Low**, and if user wants to put an alarm signal to PVM, user needs to use 3.5 mm **TRS** audio phone jack.




**N/C** - **Normally Close** (Normal State) and **Open** when activated or processed

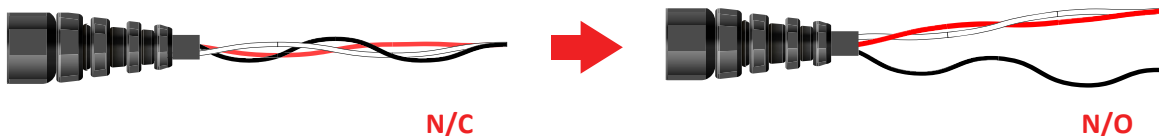


**N/O** - **Normally Open** (Normal State) and **Close** when activated or processed

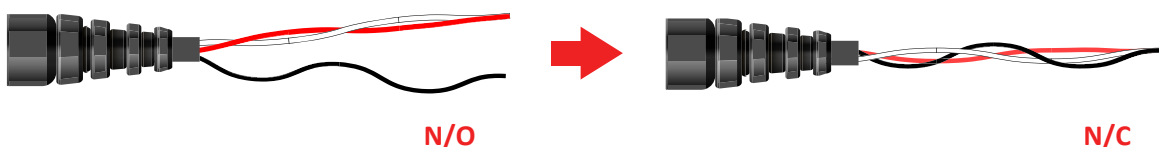

**High** (voltage) - **Normally Open** (Normal State) and **3 ~ 5V** connected when activated or processed


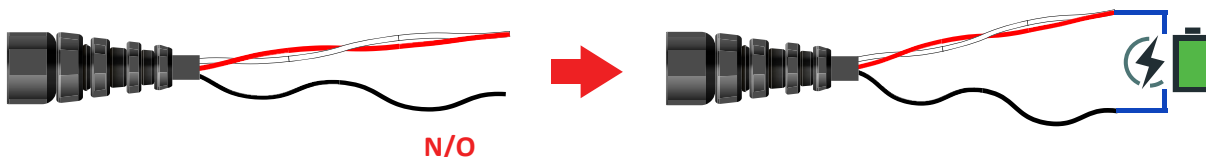


**Low** (voltage) - **Normally Open** (Normal State) and **1 ~ 3V** connected when activated or processed

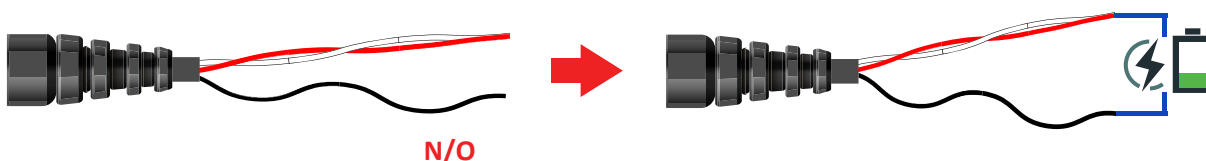

# CONTROL AND FUNCTION

## Advance - Setup Gun Detection Alert

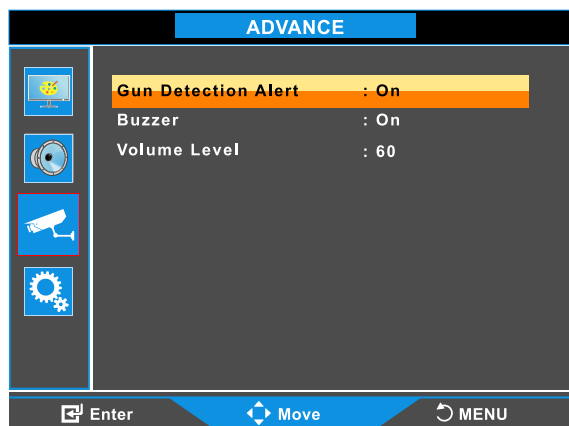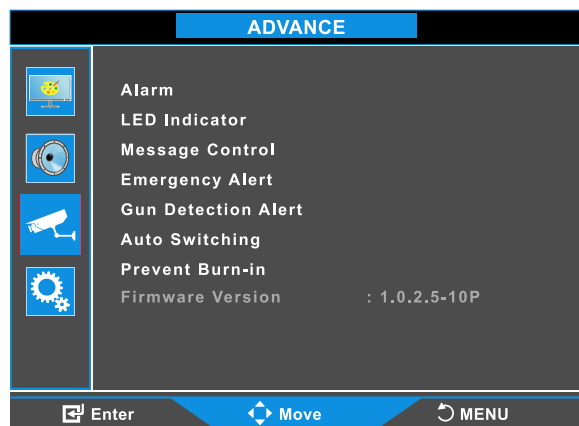

▲/▼ MOVE ◀/▶ SELECT(ADJUST) MENU RETURN

GUN DETECTION Option Window


	FUNCTION	VALUE
GUN DETECTION ALERT	Enables the gen detection alert function which will display an image and make a sound	OFF / ON
BUZZER	Turn on/off a buzzer sound when gun detection alert is enabled	OFF / ON
VOLUME LEVEL	Adjust the volume of buzzer sound	0 ~ 100



\* When a gun is detected, AI PVM will display the gun detection alert image & make a buzzer sound

# CONTROL AND FUNCTION

## Advance - Adjust Auto Switching

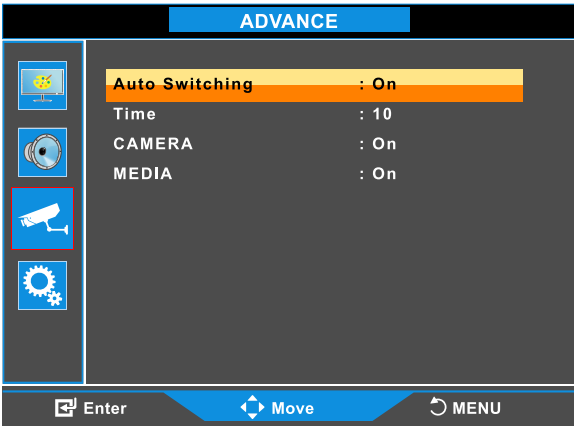


▲/▼ MOVE ◀/▶ SELECT(ADJUST) MENU RETURN

AUTO SWITCHING Option Window

FUNCTION		VALUE
AUTO SWITCHING	Enables the AUTO SWITCHING function	OFF / ON
TIME	Adjusts the time which the monitor displays one input source before switching to the other * Only selected two input sources can be displayed	3 ~ 100 sec
MEDIA	Sets the MEDIA input source as the switching display source	OFF / ON
CAMERA	Sets the CAMERA input source as the switching display source	OFF / ON

# CONTROL AND FUNCTION

## Option for VZ-PVM-A1W4N / A1B4N

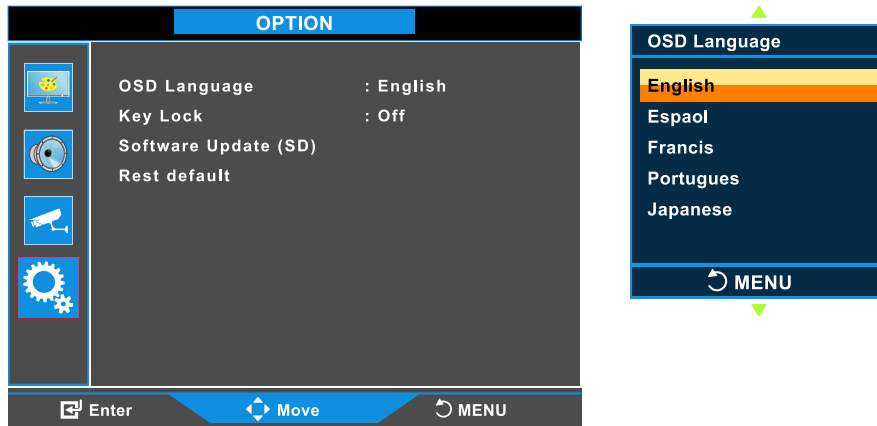


▲/▼ MOVE ◀/▶ SELECT(ADJUST) MENU RETURN

	FUNCTION	VALUE
OSD LANGUAGE	Sets the language of the OSD menu	English, Spanish, French Portuguese, Japanese
KEY LOCK <sup>1)</sup>	Enable / disable the monitor button	On / Off
SOFTWARE UPDATE	Update the system software via SD card	
RESET DEFAULT	Resets the monitor settings to the factory default	

1) To unlock this mode, press 'MENU' button & hold for 5 seconds - on the monitor. Refer to page 14's monitor buttons.

# CONTROL AND FUNCTION

## Option for VZ-PVM-A1W4P / A1B4P

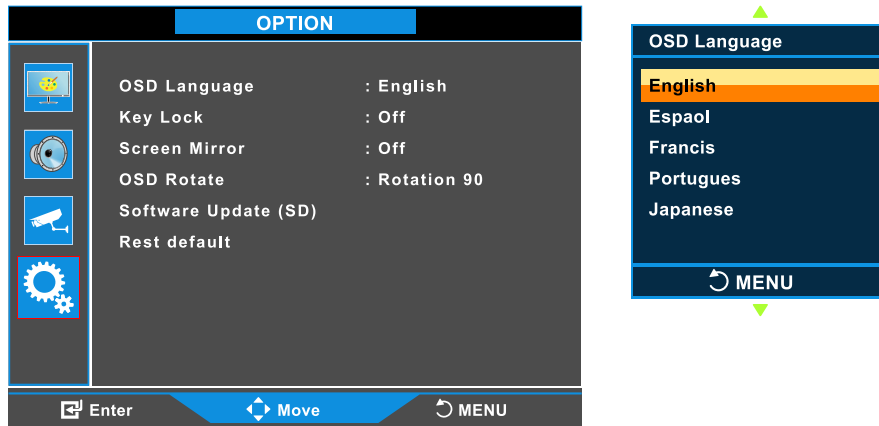

▲/▼ MOVE ◀/▶ SELECT(ADJUST) MENU RETURN

	FUNCTION	VALUE
OSD LANGUAGE	Sets the language of the OSD menu	English, Spanish, French Portuguese, Japanese
KEY LOCK <sup>1)</sup>	Enable / disable the monitor button	On / Off
SCREEN MIRROR	Rotate the display window	Off / H / V / HV
OSD ROTATE <sup>2)</sup>	Rotate the OSD window	Rotation 90° / 180° / 270° / 0°
SOFTWARE UPDATE	Update the system software via SD card	
RESET DEFAULT	Resets the monitor settings to the factory default	


1) To unlock this mode, press 'MENU' button & hold for 5 seconds - on the monitor. Refer to page 14's monitor buttons.

2) The default angle of OSD window is 90°



# CONTROL AND FUNCTION


## Media Card Interface

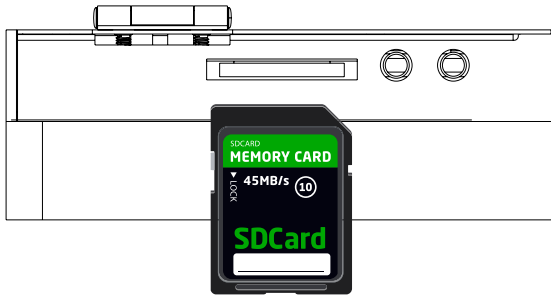

SD Card

- **Connect SD card** - Connect SD card to SD Card slot located at the back of the PVM
- **Caution** - To use recording function, user should remove every files and format the SD card

## Media Player OSD


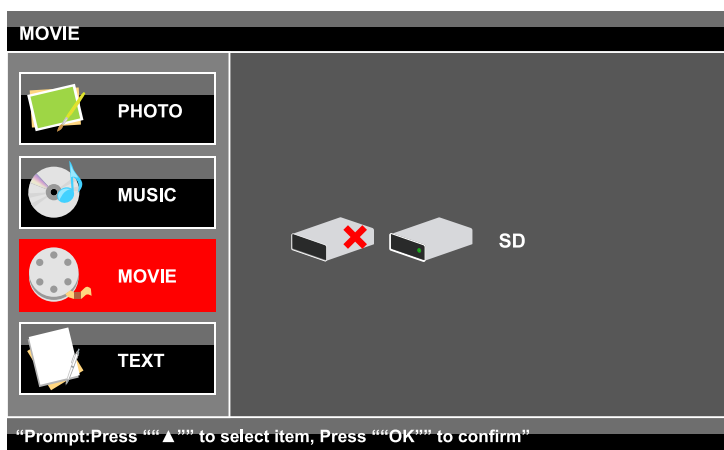


### FUNCTION

PHOTO	Displays image files from SD card
MUSIC	Plays music files from SD card
MOVIE	Plays video files from SD card
TEXT	Plays text files from SD card

# CONTROL AND FUNCTION


## Photo

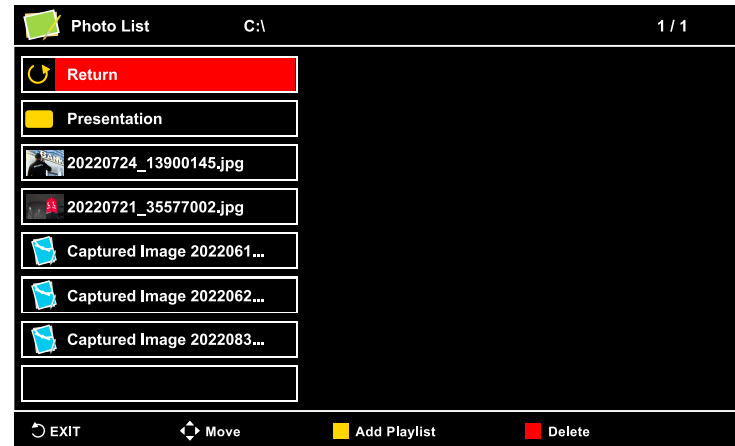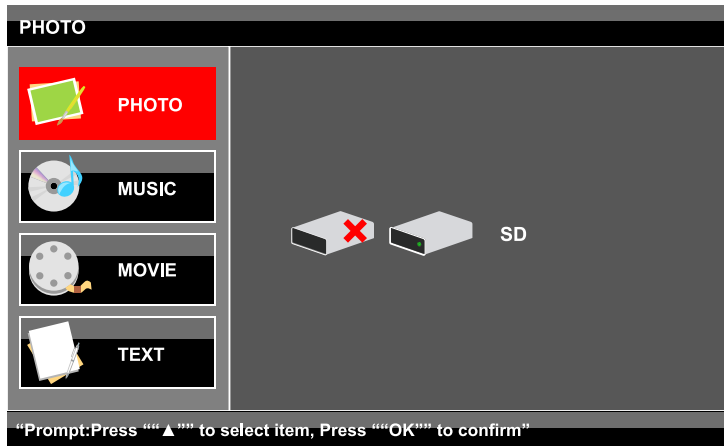

When you select **PHOTO** on the entry menu of Media play:

1. Press the **ENTER** button and then press **◀ / ▶ / ▲ / ▼** buttons to select a image file to display.
2. Press the **ENTER** button to select photo files to play and then press **▶ ||** button to display the image or slide-show.  
*\*Note: If you have more than one video file, selected video files will display one by one.*
3. Press **▶ ||** button to pause the slide-show and show only one image file in a non "slide-show" mode.
4. Press the **EXIT / ■** button to return to the **Media OSD MENU**

## Music

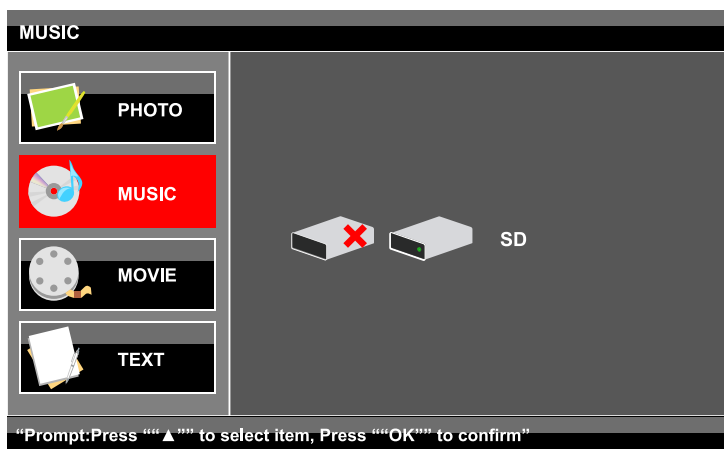


When you select **MUSIC** on the entry menu of Media play:

1. Press the **ENTER** button and then press **◀ / ▶ / ▲ / ▼** buttons to select a music file to play.
2. Press the **ENTER** button to select music files to play and then press **▶ ||** button to play the music files.  
*\*Note: If you have more than one music file, selected music files will play one by one.*
3. Press **▶ ||** button to pause playing music.
4. Press the **EXIT / ■** button to return to the **Media OSD MENU**.

# CONTROL AND FUNCTION



## Movie

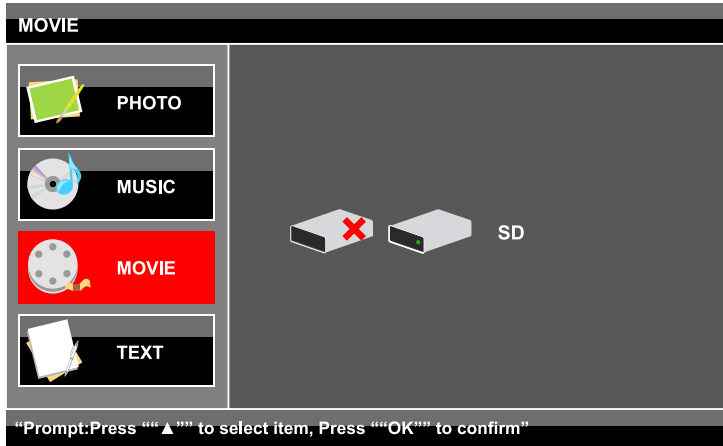

When you select **MOVIE** on the entry menu of Media play:

1. Press the **ENTER** button and then press **◀ / ▶ / ▲ / ▼** buttons to select a video file to play.
2. Press the **ENTER** button to select video files to play and then press **▶ ||** button to play the video files.  
*\*Note: If you have more than one movie file, selected movie files will display one by one.*
3. Press **▶ ||** button to pause the video file.
4. Press the **EXIT / ■** button to return to the **Media OSD MENU**

## Text

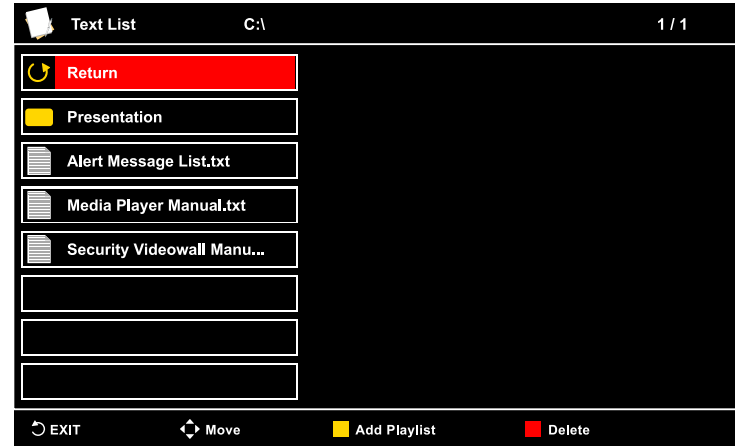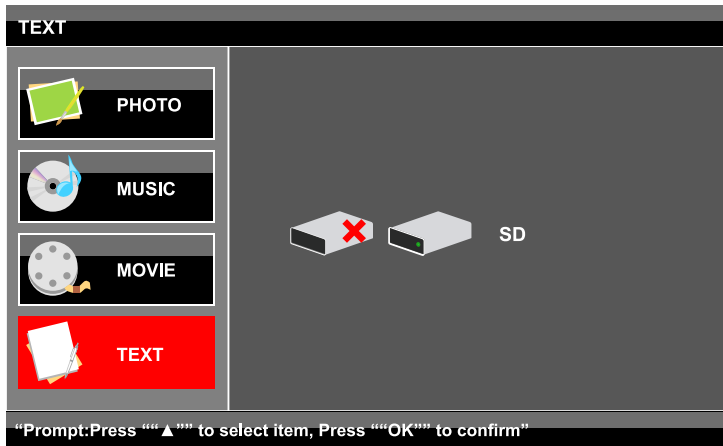

When you select **TEXT** on the entry menu of Media play:


1. Press the **ENTER** button and then press **◀ / ▶ / ▲ / ▼** buttons to select a text file to play.
2. Press the **ENTER** button to select text files to play and then press **▶ ||** button to play the text file.  
*\*Note: If you have more than one text file, selected text files will display one by one.*
3. Press **▶ ||** button to pause the text file.
4. Press the **EXIT / ■** button to return to the **Media OSD MENU**


# CONTROL AND FUNCTION

## Media Player for VZ-PVM-A1W4P / A1B4P

### Content

When user plays media content on the portrait AI PVM, user needs to make the specific video or image format.

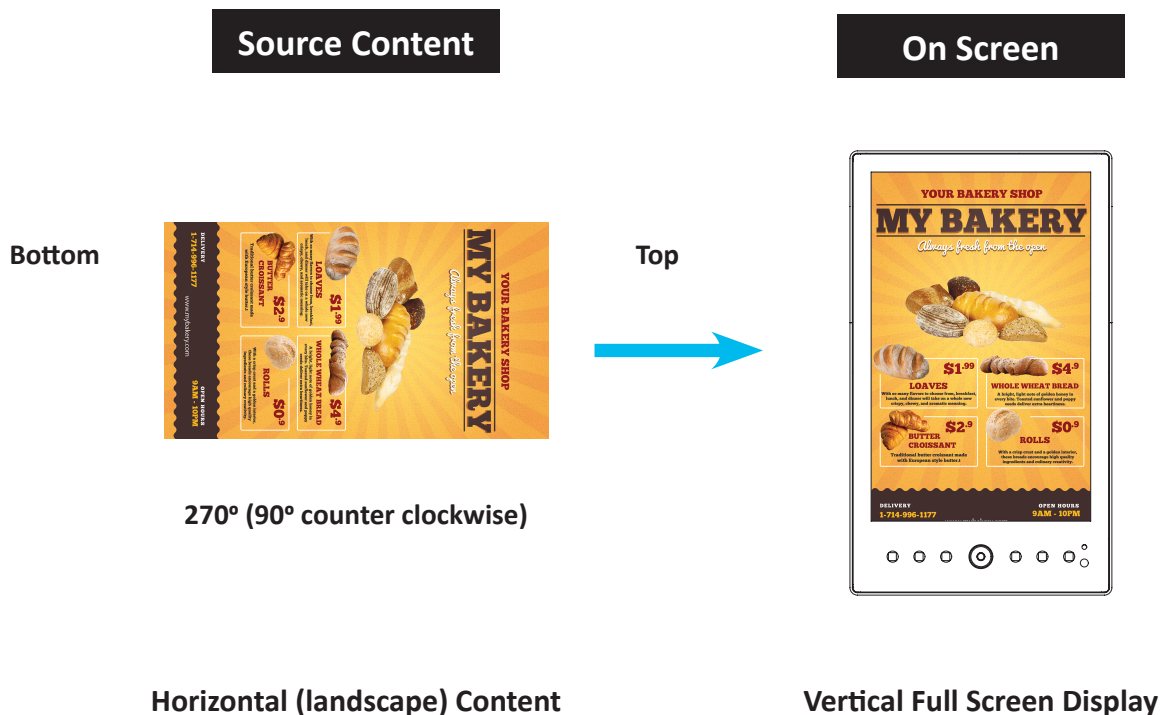


 When user makes a source video/image, the created video/image should be shown as the above picture - full screen video/image. That is, the source video/image will be displaying as 270° ( 90° coutner clockwise ) rotation.

# CONTROL AND FUNCTION

## Media Player for VZ-PVM-A1W4P / A1B4P

### Note


If user creates a portrait video/image, it will be shown like below picture. That is, the vertical image is display as the center horizontal video/image.

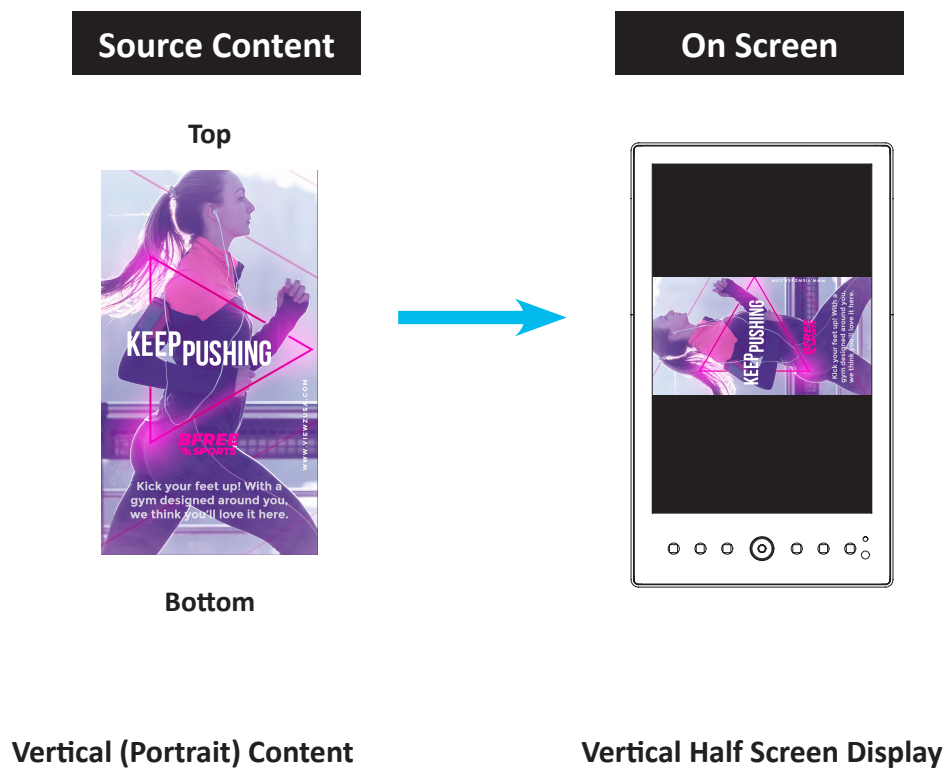

# MOUNTING GUIDE

## Wall Mounting (Optional)

VZ-PVM monitors are suitable for VESA wall mount (not included).

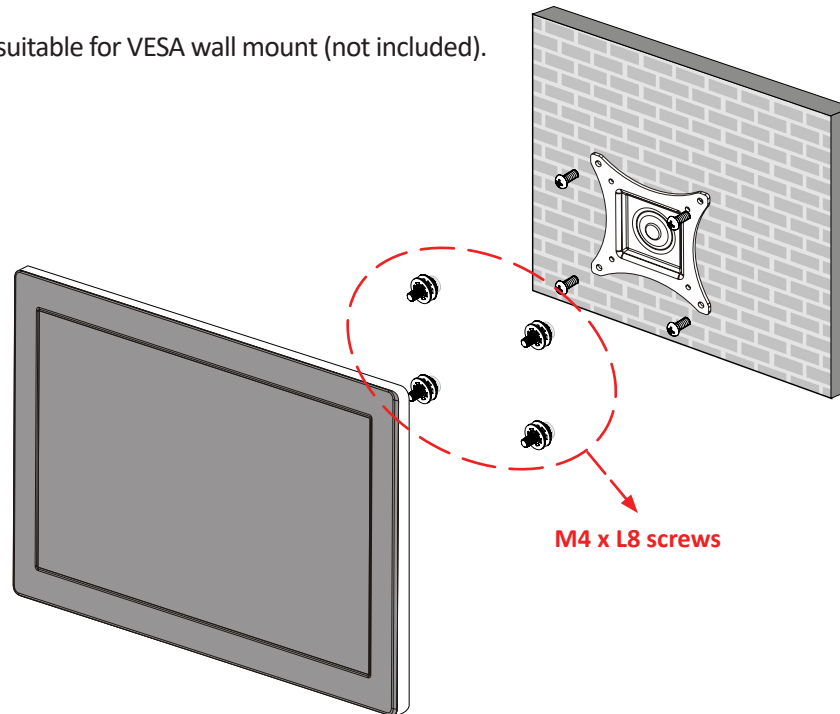

1. VZ-PVM-A1W4N / VZ-PVM-A1B4N : VESA WALL MOUNT 75mm x 75mm
2. VZ-PVM-A1W4P / VZ-PVM-A1B4P : VESA WALL MOUNT 75mm x 75mm

### ! Attention!

**VZ-PVM-A1W4N/VZ-PVM-A1B4N (75x75)** : You must use 4 \* M4 x L8 screws to assemble this monitor and the wall mount bracket.

**VZ-PVM-A1W4P/VZ-PVM-A1B4P (75x75)** : You must use 4 \* M4 x L8 screws to assemble this monitor and the wall mount bracket.

### ! WARNING !

If user uses screws longer than

M4 x L8 mm for 75 x 75 - VZ-PVM-A1W4N / VZ-PVM-A1B4N / VZ-PVM-A1W4P / VZ-PVM-A1B4P

it may cause damage to the unit. Please use bolt of correct size and length as instructed.



### Mounting Safety !

At least two people are recommended to safely install the mount.

# SPECIFICATION

Model No.		VZ-PVM-A1W4N/A1B4N	VZ-PVM-A1W4P/A1B4P
Size & Type		10.1"	10.1"
LCD	Panel Type	10.1" LED Backlit Monitor	10.1" LED Backlit Monitor
	Pixel Pitch	0.1695 (H) x 0.1695 (V) mm	0.1695 (H) x 0.1695 (V) mm
	Brightness	350 cd/m <sup>2</sup>	350 cd/m <sup>2</sup>
	Contrast Ratio	900 : 1(Typ.)	900 : 1(Typ.)
	Viewing Angle	170° / 170°	170° / 170°
	Display Color	16.7 Million	16.7 Million
	Response Time	< 30.0 ms	< 30.0 ms
	Resolution	1280 x 800 @60Hz	800 x 1280 @60Hz
	Active Display Area	216.96 (H) x 135.60 (V) mm	138.0 (H) x 219.4 (V) mm
	Aspect Ratio	16 : 10	10 : 16
Case Type		Metal	
Color Temperature		Warm / Normal / Cool / User	
Speaker		2W x 2	
Operating Temperature		14°F ~ 122°F / -10°C ~ 50°C	
Operating Humidity		5 ~ 90% RH	
Weight		Net : 4.4 lb / 2.0 kg	Net : 4.4 lb / 2.0 kg
		Gross : 5.51 lb / 2.5 kg	Gross : 5.51 lb / 2.5 kg
INTERFACE		RJ-45 for IP Camera & Power x1, Alarm In/Out x1/1, Micro SD Card In x1, SD Card In x1	
Safety & EMC Certification		CE / FCC / NDAA / ROHS	
Electrical Ratings	PoE IN	37 - 52V === 0.5A	
Power Consumption		≤ 24 W	
Accessories		Remote Controller, Door Key, Quick Reference Guide, QR Code Guide for Manual / Software / Firmware	

# SPECIFICATION

## Camera Specification

	Parameters	Description
Production Information	Product Name	2MP IP module
Main Chipset	Encode Chipset	NT98529
	Sensor	SONY IMX307
Camera	Resolution	1920 (W) x 1080(H)
	Video System	NTSC / PAL
	Digital Zoom	Support
	Minimum illumination	Color: 0.01 Lux@ (F1.2, AGC ON) / B&W: 0.0 Lux@ (IR LED ON)
	Day & Night Mode	Support - Auto (ICR)
	Electronic Shutter Speed	Auto/Manual, 1/5 ~ 1/20,000s
	S/N Ratio	55dB
Lens	Wide Dynamic Range (WDR)	True WDR
	Lens Type	Board
	Focal Length of the Lens	2.8 mm
External interface	Network Interface	RJ45 10 /100 Base-T
	Reset Button	Support
	Storage	Built-in Micro SD slot, up to 256G
Video	Video Encode	H.264 (Main profile), H.265, MJPEG, CBR, VBR
	Multi-Stream	Main stream ,2 <sup>nd</sup> stream, 3 <sup>rd</sup> stream
	Video Resolution and Frame Rate	NTSC 60Hz:30fps / PAL 50Hz:25fps
		Main stream: 1920*1080 @ 25/30fps   1280*720 @ 25/30fps
		2 <sup>nd</sup> stream: D1, VGA, 640×360, CIF, QVGA @ 25/30fps
		3 <sup>rd</sup> stream: VGA, CIF, QVGA @ 25/30fps
	Video Bit Rate Control	1Mbps-8Mbps,support CBR/VBR
	Video Bit Rate	Main stream: 100kbps ~ 12Mbps
		2 <sup>nd</sup> stream: 10kbps ~ 6Mbps
		3 <sup>rd</sup> stream: 10kbps ~ 3Mbps
	Image Enhancement	Support HLC / BLC / Defog / WDR
	White Balance	Auto
	Gain Control	Auto / Manual
	Noise Reduction	2D/3D DNR
	Aisle Mode	Support
	Smart IR	Support
	Mirror	Support
	Region of Interest	Off/On (8 Zone, Rectangle)
	Motion Detection	Support
	Privacy Masking	Support



# SPECIFICATION

## Camera Specification

Parameters		Description
Smart Function	Gun / Face / Full Body / Motion Detection	Support
	Intelligent Detection	Smart Motion, Single/Double Line Crossing, Multi-Loitering, Wrong Way, General Parameters, Single Bad, Gun Detect, Gun Detect, People Count, Intrusion
Network	Integration Protocol	ONVIF 22.06 (supported), SDK, CGI
	Network Protocol	IPv4/IPv6, 802.1x, HTTP, HTTPS, TCP/IP, UDP/IP, RTSP, DHCP, NTP, RTCP/RTP, PPPoE, SMTP, DNS, UPnP, FTP, ARP, SNMP, TLS/SSL
	Streaming Mode	Unicast
	Concurrent Access (# of Users)	10 users ( Maximum 3ch 1080P )
	User Rights	Two roles: administrator and common users. The administrator can assign common users different rights.
WEB application	Language	English default
	Browser	Windows Edge / Firefox / Chrome
Recording Capacity		TF Card (EXT4 format, MAX256G)
	2MP - H.265 w/256G	30fps (11days) / 15fps (15days)
	2MP - H.264 w/256G	30fps (5days) / 15fps (7days)

## Media Player Specification

Description	
External Storage	Support SD/SDHC CARD (Max 128GB)
VIDEO Format	MP4, H.265, H.264, H.263, MPEG 1/2/4, AVS, RV30, RV40
AUDIO Format	MP3, WMA, AAC, PCM, Cook, MP2
IMAGE Format	JPEG, PNG, BMP
VIDEO Resolution	1080P @60/50Hz, 1080i @60/50Hz, 720P @60/50Hz
VIDEO Play Control	AUTO, REPEAT, ZOOM, RESUME, TIME

# TROUBLESHOOTING GUIDE

- Check the following before calling for service.
- If the same problems continue after checking, contact the reseller you purchased the monitor from.

At start	We recommend that you test with different input sources when you have trouble with the current input source. If symptom persists, follow the instructions below. After following the instructions below, please contact us at 1-888-99-VIEWZ.
No image or Noise on the screen	<ul style="list-style-type: none"> <li>- Make sure the power cable is correctly plugged into the outlet</li> <li>- Make sure the power cable is correctly plugged into the monitor</li> <li>- Make sure the cable is correctly connected between monitor &amp; source</li> <li>- Check brightness and see if brightness is set to 'Ø'</li> <li>- Check video source</li> </ul>
Incorrect display or Half display	<ul style="list-style-type: none"> <li>- Check your video source</li> <li>- Reset video source : connection, cable replacement, setting &amp; more</li> </ul>
Flickering and shadow image	<ul style="list-style-type: none"> <li>- Check your input source setting for resolution and phase (Hz)</li> </ul>
The audio function is not working	<ul style="list-style-type: none"> <li>- Check the volume and make sure MUTE is not on</li> <li>- Check HDMI / Audio port cable connection</li> </ul>
LED is flickering or no image	<ul style="list-style-type: none"> <li>- Check the interface cable connection and make sure it's plugged in correctly</li> <li>- Check the input source</li> </ul>

# TERMS OF WARRANTY / RMA

- The warranty period for this monitor is 3 years. The warranty will be voided for the scenarios listed below.
- You can also download the manual and information at VIEWZ web site: [VIEWZUSA.COM](http://VIEWZUSA.COM)

Cases of Non-Warranty Coverage	When power feed to the monitor exceeds capacity and causes damage
	Accident, Abuse, Misuse, Neglect, Fire, Water/liquids, Lightning or any act of nature
	Damaged by dropping, throwing and hitting the monitor
	Failure caused by users attempt to modify the product
	Failure by limited life of parts such as LED Lamps and any other consumables
	Damaged by using third party power cable, unstable power input and electric shock

\* Above information can be changed without notification - please check our website or contact ViewZ representative for latest RMA service policy.

\* When shipping the monitor for RMA, make sure to pack safely to ensure the monitor is not damaged during shipping.

# WARRANTY

## ViewZ USA LIMITED 3 YEAR WARRANTY

### What and Who is Covered by this Limited Warranty and for How Long

ViewZ USA warrants this product to be free from defects in material and workmanship for 3 years to the original owner of this product. The limited warranty is valid only for the original purchaser of the product.

### What ViewZ USA Will Do

At the sole discretion of ViewZ USA, ViewZ USA will repair or replace any product or product part that is defective. If ViewZ USA chooses to replace a defective product or part, a replacement product or part will be shipped to you at no charge, but you must pay any labor costs.

### What is Not Covered; Limitations

ViewZ USA disclaims any liability for damage to mounts, adapters, displays, projectors, other property, or personal injury resulting, in whole or in part, from improper installation, modification, use or misuse of its products.

ViewZ USA disclaims all other warranties, express or implied, including warranties of merchantability and fitness for a particular purpose. ViewZ USA is not responsible for incidental or consequential damages, including but not limited to, inability to use its products or labor costs for removing and replacing defective products or parts. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation or exclusion may not apply to you.

### What Customers Must Do for Limited Warranty Service

If you discover a problem that you think may be covered by the warranty you MUST REPORT it in writing to the address below within thirty (30) days. Proof of purchase (an original sales receipt) from the original consumer purchaser must accompany all warranty claims. Warranty claims must also include a description of the problem, the purchaser's name, address, and telephone number. General inquiries can be addressed to ViewZ USA Customer Service at 1-888-998-4399. Warranty claims will not be accepted over the phone or by fax.

ViewZ USA  
Attn: Warranty Claim  
1030 N ARMANDO ST.,  
ANAHEIM, CA 92806

### How State Law Applies

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

### Disclaimer

ViewZ USA intends to make this manual accurate and complete. However, ViewZ USA makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this monitor. The information contained in this document is subject to change without notice or obligation of any kind. ViewZ USA makes no representation of warranty, expressed or implied, regarding the information contained herein. ViewZ USA assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

### Contact Us

**NORTH AMERICA**  
1030 N ARMANDO ST.,  
ANAHEIM, CA 92806  
USA and Canada  
Phone: 1-888-998-4399  
Fax: 1-714-996-1138  
Other Locations  
Phone: (001) 888-998-4399  
Fax: (001) 714-996-1138

© ViewZ USA