 


# VZ-HD-PVM N SERIES / VZ-PVM-Z1W5N 10" HD PUBLIC VIEW MONITOR w/DVR

---

## QUICK REFERENCE GUIDE - DVR OPERATION

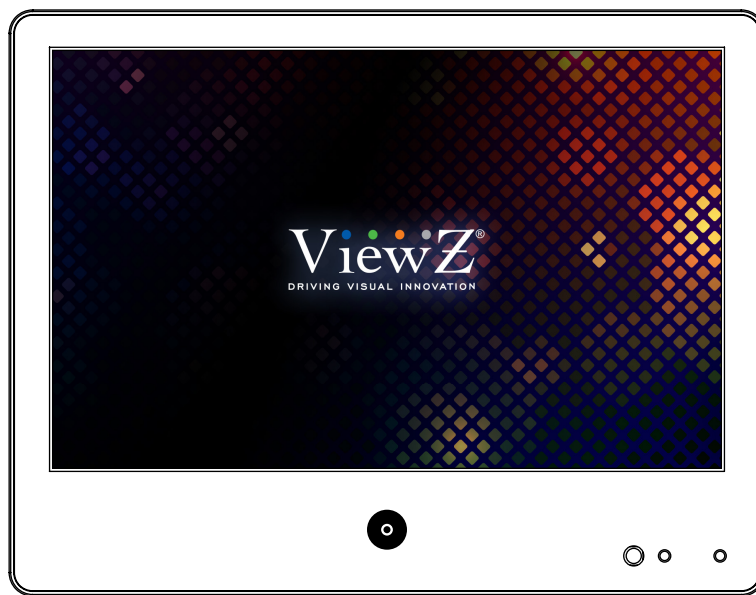 


**ViewZ<sup>®</sup>**  
[www.viewzusa.com](http://www.viewzusa.com)

Please read this manual thoroughly before use, and keep it handy for future reference.

# CONTROL AND FUNCTION

## Operation Procedure

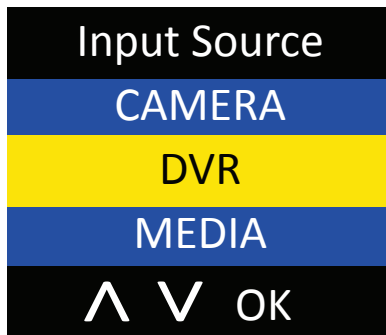




All picture, sound settings and setup can be adjusted in OSD (On Screen Display) menu.

To adjust the OSD screen:

1. Input DC12V power (Connect DC adaptor) at 10.1" HD PVM.
2. Press **POWER** button on remote controller to display the camera image.
3. Press **SOURCE** button to select a source and select DVR.

# CONTROL AND FUNCTION

   
## Operation Procedure

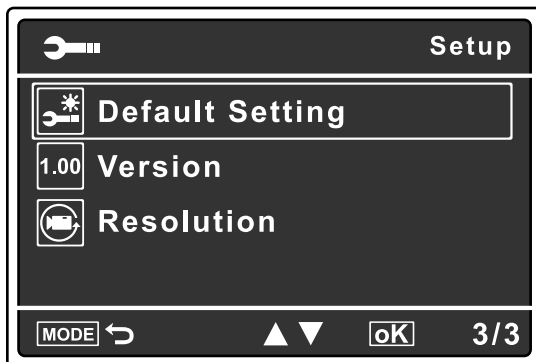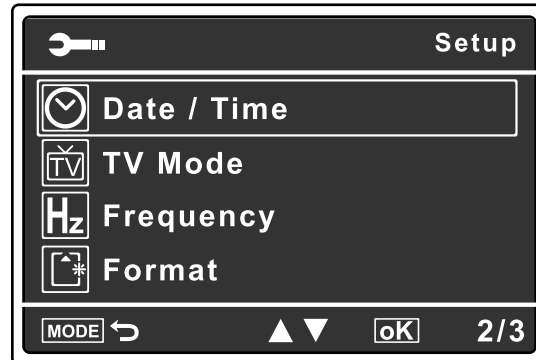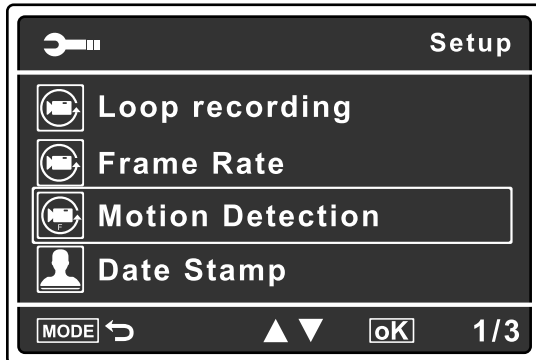

4. Set necessary setting for DVR functions below.
  - a. **Loop recording** : Select OFF, 1 minutes, 2 minutes, 3 minutes, 5 minutes or 10 minutes Increments to create the each video file. For example, If you select 1 minute, 1 minute video files will be created incrementally.
  - B. **Frame Rate** : Select frame rate at 30fps, 25fps, 15fps, 10fps, 5fps or 1fps
  - c. **Motion Detection** : Select ON or OFF for motion detection based recording.
  - d. **Date Stamp** : Select On or OFF to put put time stamp for each video file.
  - e. **Date / Time** : Set up Year, Month, Day and Time.
  - f. **TV Mode** : Set up recording video format NTSC or PAL.
  - g. **Frequency** : Set up 50Hz or 60Hz for video.
  - h. **Format** : Format the inserted micro SD card.
  - i. **Default Setting** : Go back to the default setting.
  - j. **Version** : See the firmware version in this monitor.
  - k. **Resolution** : Select D1, VGA or QVGA.
5. After the settings are set , insert a Micro SD card into the Micro SD slot. After a couple of seconds, the recording will start.  
To stop recording, press the ENTER button in the DVR section of the wireless remote.

# CONTROL AND FUNCTION
 
## Operation Procedure

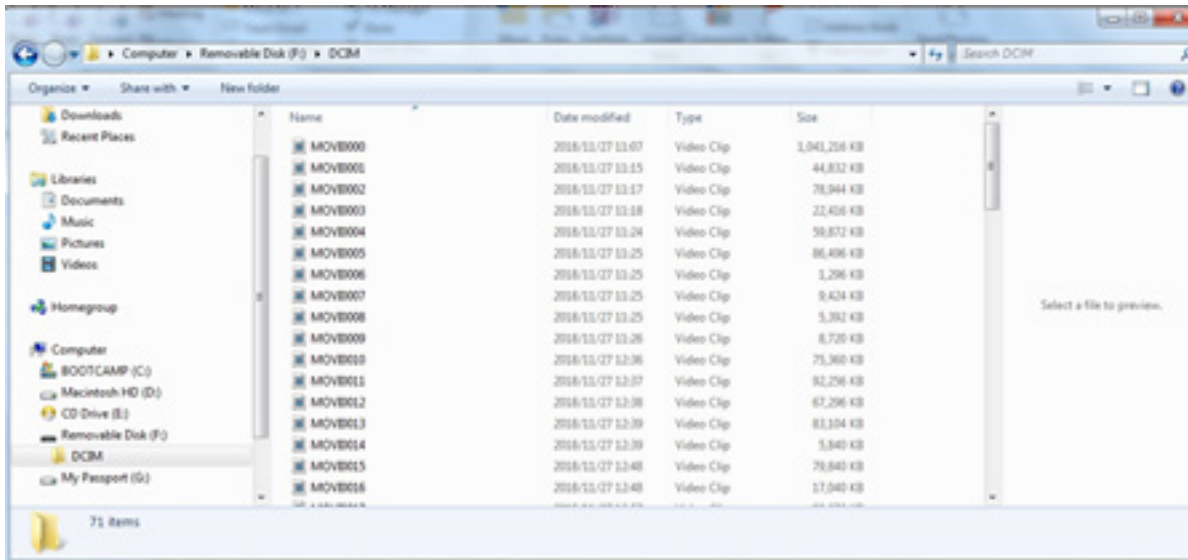

6. How to playback video : There are two ways to play back the recorded video.
- 1) Select the video file and play it on the monitor using a wireless remote. Press **PLAY** button on a wireless remote to select and play.
  - 2) Take out the micro SD card and play files on the PC. By using any media player, user can display the recorded media files. The media files will be listed out in the order of date and time.