
# **VZ-WM71**

# WALL MOUNT FOR 43" to 65"

## VZ-WM71 INSTALLATION INSTRUCTIONS

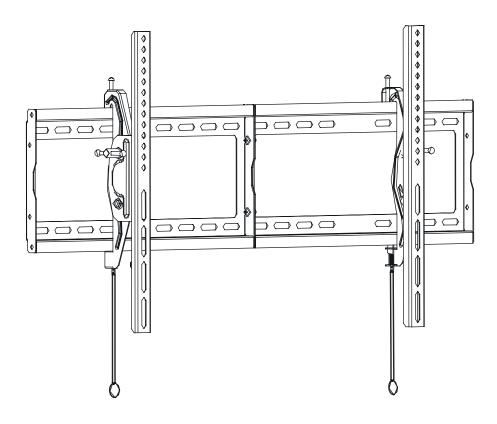





VESA Standard Mounting Hole MAX. 800 x 400, MIN. 100 x 100



65" MAX



MAX WEIGHT 165 lbs / 75 kg



# **Weight Limit**

# **Maximum Flat-panel Weight:**

**165 lbs** 

THE WALL STRUCTURE MUST BE CAPABLE OF SUPPORTING AT LEAST FIVE TIMES THE WEIGHT OF THE FLAT-PANEL. IF NOT, THE WALL STRUCTURE MUST BE REINFORCED.

## **Parts**

Your ViewZ mount product is shipped with all proper installation hardware and components. If there are parts missing and/or damaged, please stop the installation and contact ViewZ USA at (888)-998-4399.

1		x 2 2	of the same of the	x 1
3	10000000000000000000000000000000000000	x 1 4		x 1
T1	<b>M</b> 4x16mm	x 4 2	<b>M</b> 4x30mm	x 4
Т3	M6x16mm	x 4 T4	M6x45mm	x 4
Т5	M8x16mm	x 4 T6	M8x45mm	x 4
Т7	Washers M5	х 4 Т8	Washers M6	x 4
Т9	Spacers	x 4 T10	Spacers	x 12
W1	L5mm  Lag Bolts 5/16x 2 <sup>2/5</sup> in	x 6 W2	L10mm  Wall Plug	x 6
W3	Washers M8	x 6 U1	M6x10mm	x 4
U2	Locknut	x 4		

M6



## Safety

#### **IMPORTANT SAFEGUARDS**



party, then these instructions must be included.

When using the product, basic safety precautions should always be followed to reduce the risk of injury including the following:

- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the product. Cleaning and user maintenance shall not be made by children without supervision.
- You will have to adjust this product after installation is complete.
- Do not exceed maximum listed weight capacity. Serious injury or property damage may occur.
- Because mounting surface materials can vary widely, it is imperative that you make sure mounting surface is strong enough to handle mounted product and equipment.

#### IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

#### **Before First Use**

· Check for transport damages.



Risk of suffocation!

are a potential source of danger, e.g. suffocation.

If you do not understand these instructions or install the product, Refer to Installation of Products for problems arising from useUse video or send us an email:

#### Cleaning and Maintenance

#### Cleaning

- To clean, wipe with a soft, slightly moist cloth.
- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.

#### Maintenance

- Check the components regularly to make sure all screws and bolts are tightened.
- Store in a cool and dry place away from children and pets, ideally in original packaging.
- Avoid any vibrations and shocks.




#### **Mounting Safety**

Two people are recommended to install the mount.



# **Installation Tools**

The following tools may be required depending on your installation.

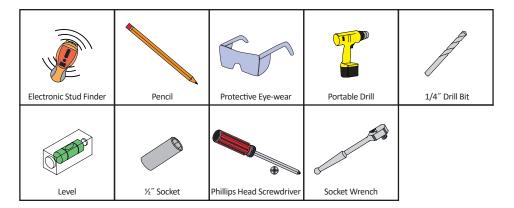


# Installation


## Step 1

Note: Please choose the right panel according to your own needs.

VESA 400mm x400mm(15.7in x 15.7in) Wood Stud

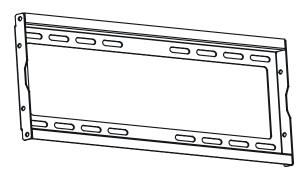


VESA 800mm x400mm(31.5in x 15.7in) Wood Stud

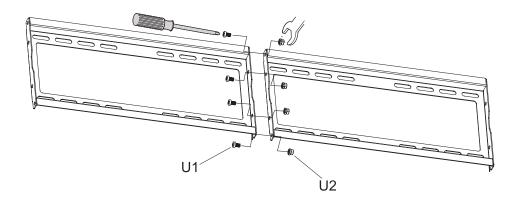



## Step 2

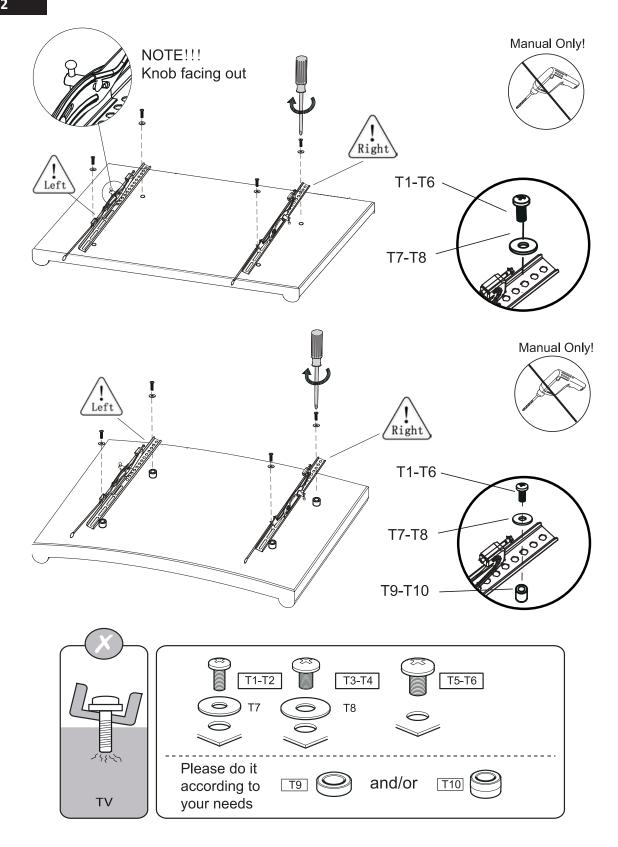




#### **Mounting Safety**


Two people are recommended to install the mount.





## Step 3

#### Wall Fixation

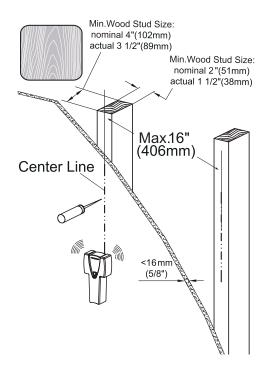


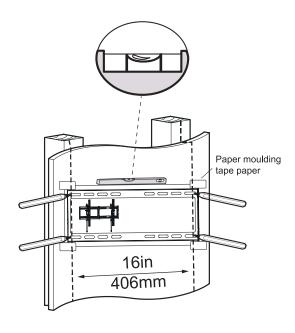


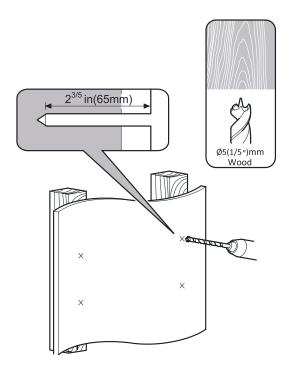


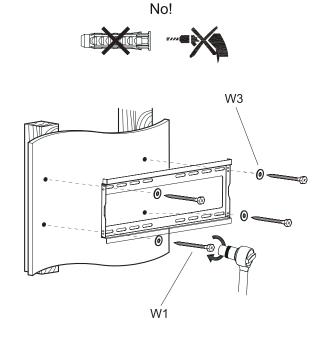




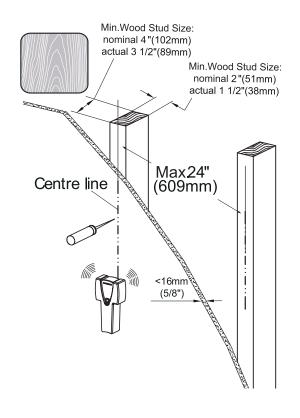


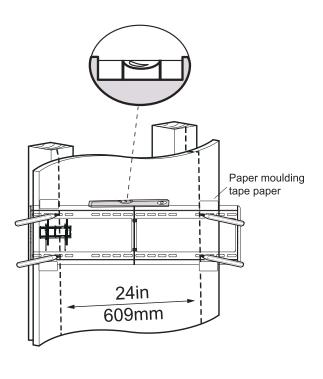


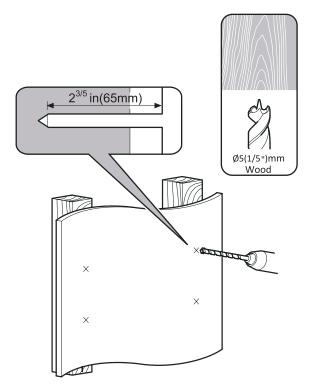


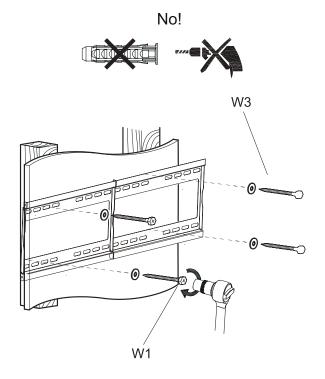




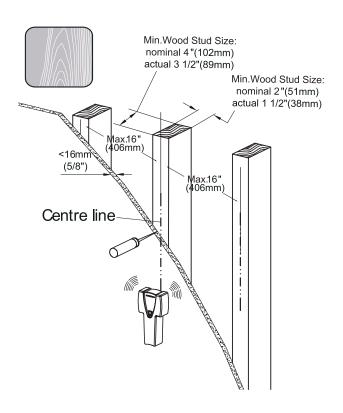


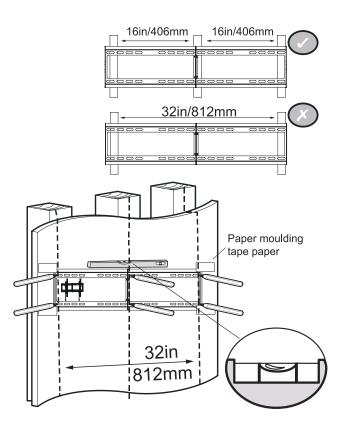


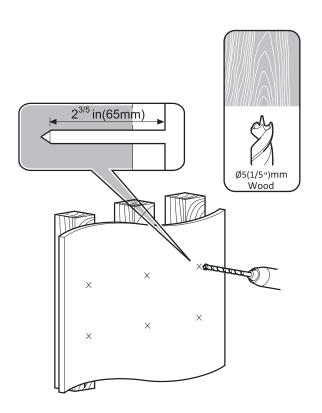

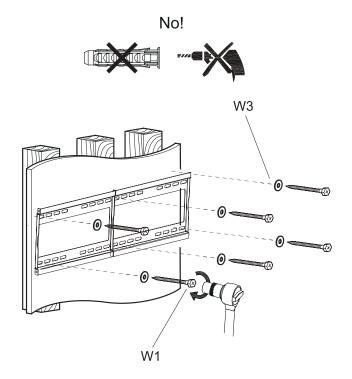





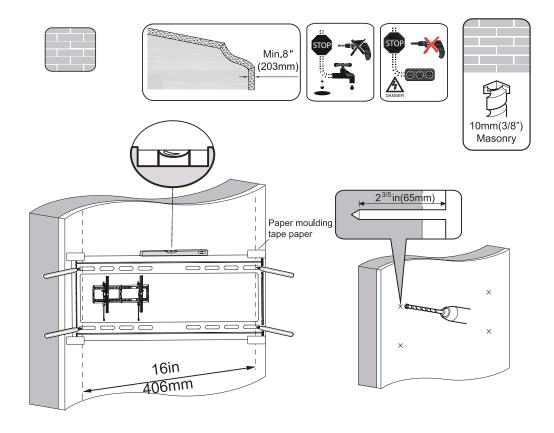

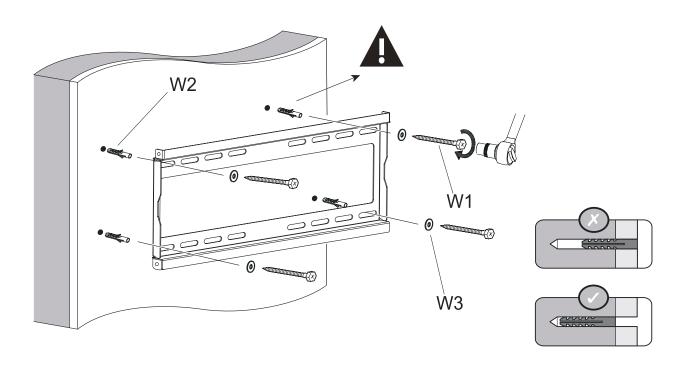



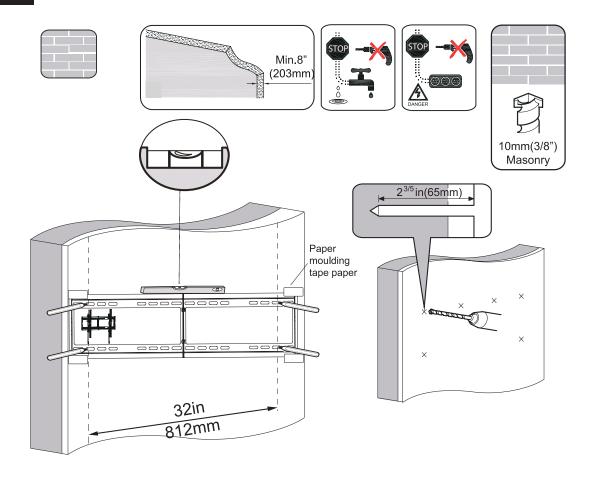


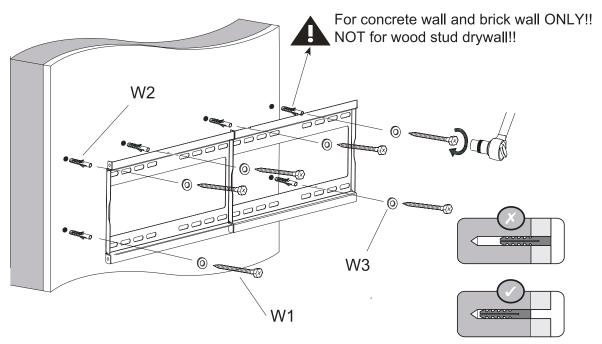



## Step 8


#### Mount the monitor

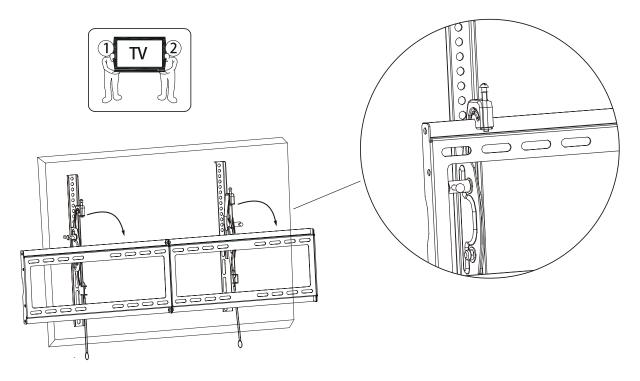



#### **Mounting Safety**

Two people are recommended to install the mount.

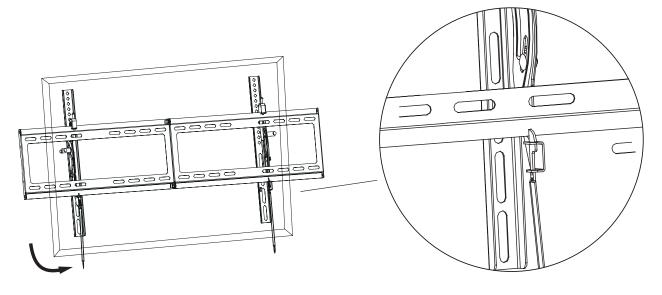


Note: after the upper hook is hooked, push the TV back until the safety lock is tightened, as shown in the picture.




## Step 9


Note: if you need to remove the TV, pull the safety lock pull down until the safety lock no longer holds the wall panel, as shown in the picture.

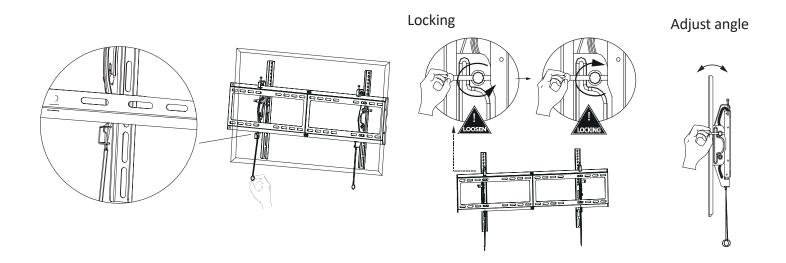

### Step 10

#### Horizontal angle adjustment

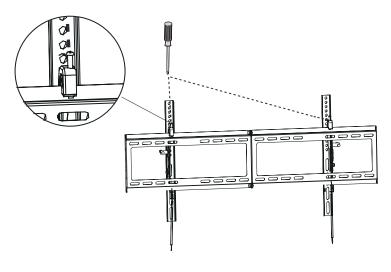

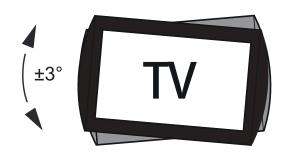

A screwdriver to adjust the screw, control the tilt angle of the TV, the angle can be controlled at ±3°.