


TIM SERIES

7" TEMPERATURE MEASUREMENT & FACE RECOGNITION MONITOR

VZ-7TIM-S SOFTWARE UPGRADE USER MANUAL

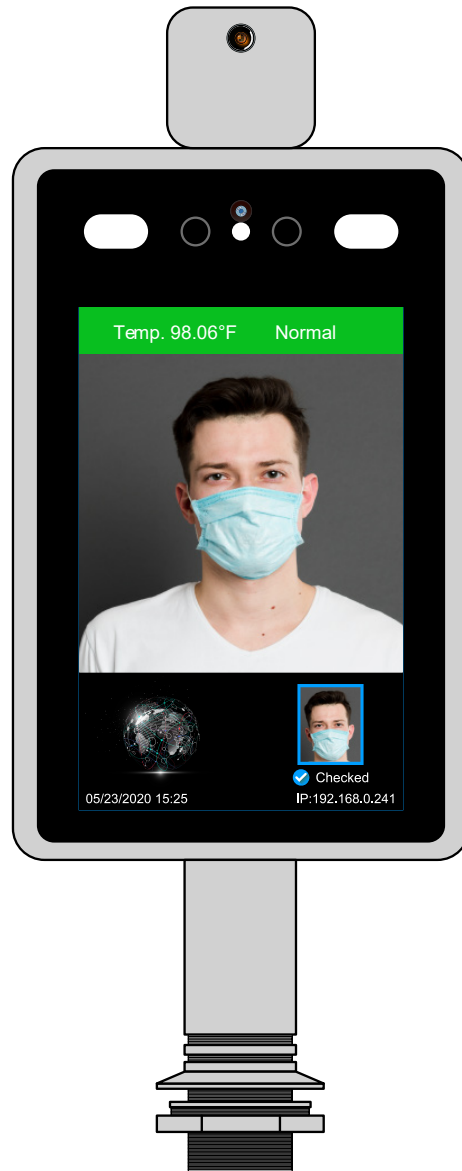

ViewZ[®]
www.viewzusa.com

Please read this manual thoroughly before use, and keep it handy for future reference.


UPGRADE SOFTWARE

Login & Device Configuration


When you double click the ViewZ icon on the desktop, you will see the loginpopup window.

- The default ID / PWD : admin/admin

After login, click 'Device Configuration' icon on the dashboard

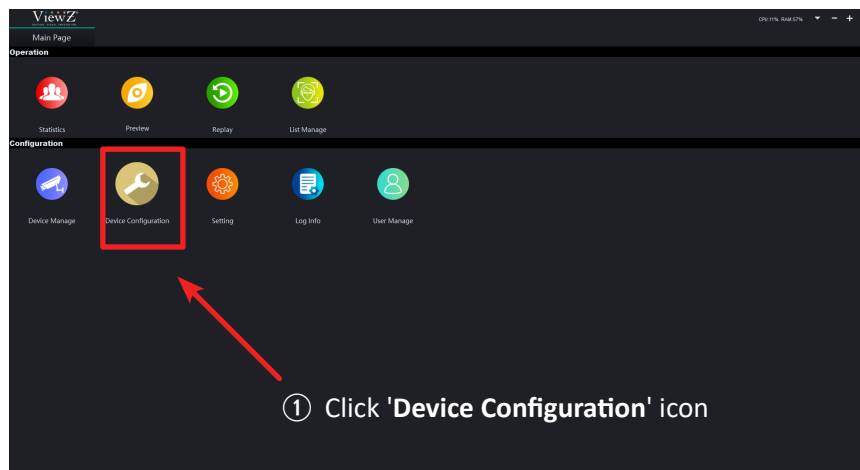

1. You will see the 'Device Configuration' window and click the 'Device List/Default Group'.
2. Double click the addressed device which you want to upgrade.

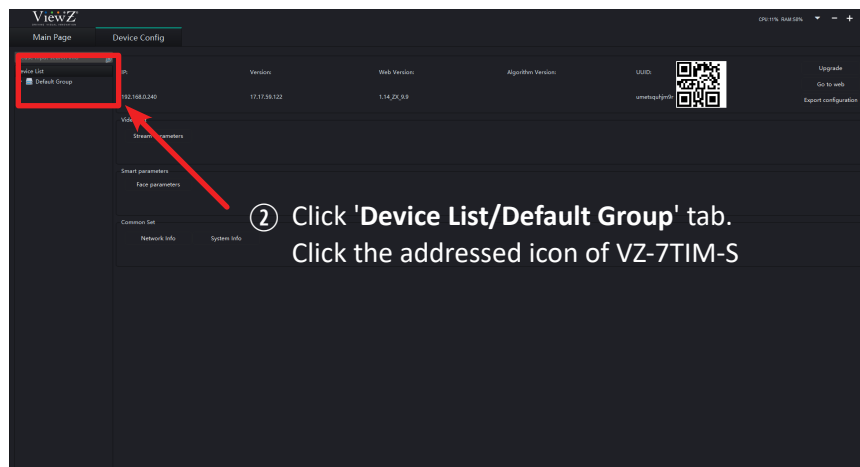





Warning

If you did not register the device, please refer 'Automatic Search and Register' section on VZ-7TIM Client SW User Manual.

UPGRADE SOFTWARE

Update

3. If you double-click the addressed device, you will see the updated 'Device Configuration' window.
4. Click the 'Upgrade' button, then you can see the popup window.
5. Click the 'Select File' button on the popup window.

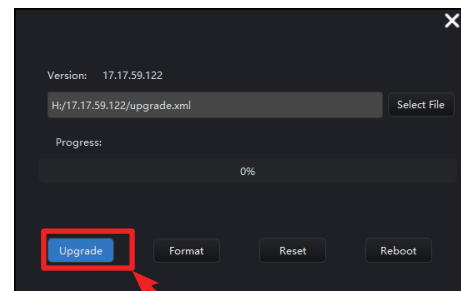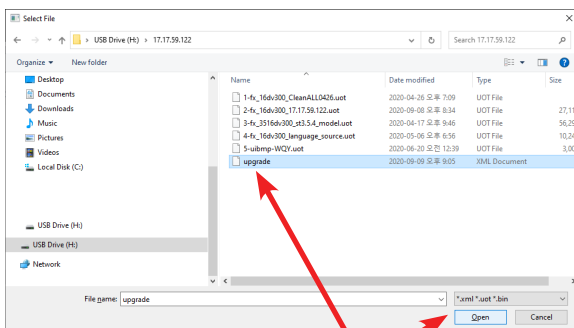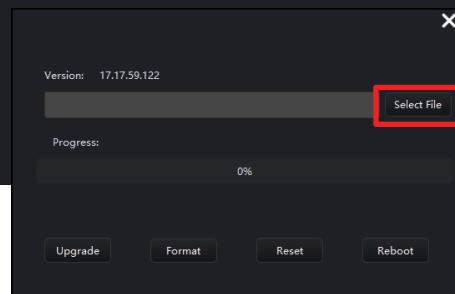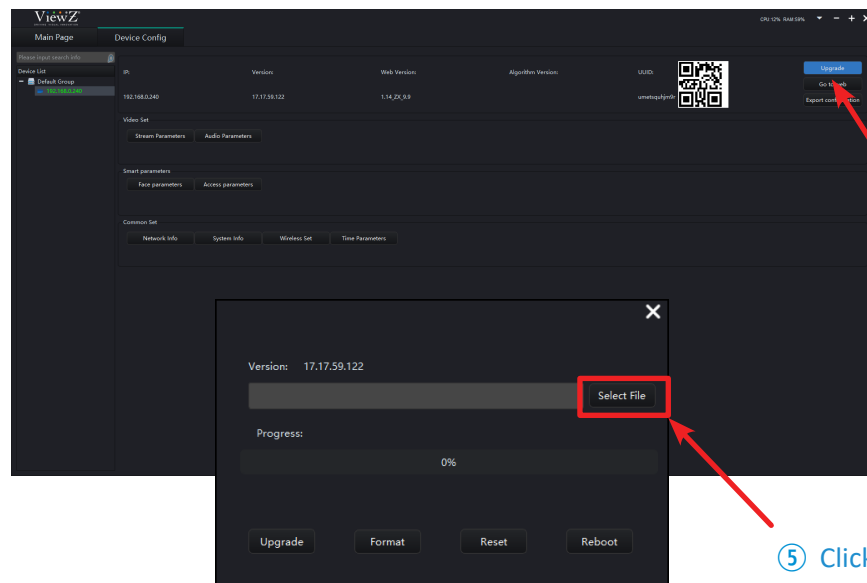

6. Select 'upgrade' file and click the 'Open' button on the 'Select File' window.
 7. Click 'Upgrade' button on the popup window.
- Then, ViewZ CMS software will automatically update the SW of VZ-7TIM-S



Warning

- The upgrading process will take 3-5 minutes and please do not disconnect connection or turn off the power. It will make a serious damage to the VZ-7TIM-S monitor.
- The upgrade file can be downloaded via our website - <https://viewzusa.com/product/vz7tims/>

UPGRADE SOFTWARE

Update

8. During upgrade process, VZ-7TIM-S monitor will automatically reboot around 2-5 times.

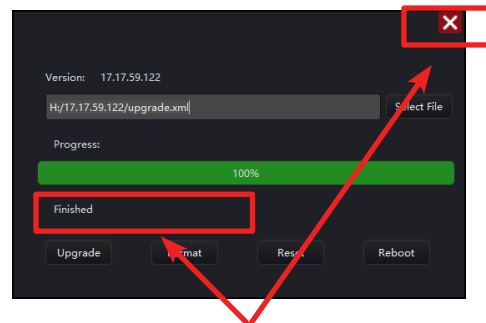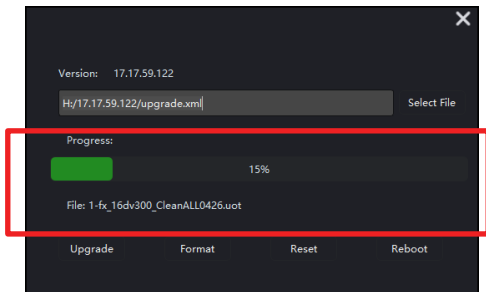

⑧ When you see the 'Finished' message, please click 'X' button to close.

9. When you see the 'Finished' message, please click 'X' button to close the process of upgrade. Wait until VZ-7TIM-S monitor will be shown.